

Basic Manual



W51P
by Panasonic

CDMA 1X
WIN

au by KDDI

Contents/
Getting Ready

Phone Call

Inputting
Characters

Address Book/
Pair Function

Mail/
Hello Messenger

Camera

EZweb

EZ Navi

EZ FeliCa

EZ · FM

PC Site Viewer

Simple Mode/
Teens Mode

Other Functions

Troubleshooting/
Remote Auto Lock

Index

Introduction

Thank you for purchasing the W51P.

Before using it for the first time, be sure to read the W51P Basic Manual (this PDF manual) so as to know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

Printed Manuals for the W51P (Japanese)

The W51P comes with a Basic Manual and an Instruction Manual.

For information about basic operation



W51P Basic Manual

Equivalent to this English PDF manual.

For detailed information about each function



W51P Instruction Manual

English version not available.

The following information is also available on the au website.

- To download the Basic Manual/Instruction Manual
(<http://au-pro.kddi.com/phone/torisetu/index.html>)
- To access a keyword searchable au online manual
(<http://www.au.kddi.com/manual/index.html>)

You can also access the au online manual using EZweb.

EZweb Access

EZトップメニュー(EZ Top Menu)

→auお客さまサポート(au Customer Support)

→調べる(Information)

→オンラインマニュアル(Online Manual)

Info

The typeface, fonts, and colors of the texts on the screens shown in this manual may differ from the actual contents. Also, certain icons and the scroll bars may be omitted.

Cellphone Etiquette

Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.


Some locations do not allow the use of cellphones.

- Using a cellphone while driving is dangerous and prohibited by Traffic Control Law.
- Using a cellphone in an aircraft is prohibited by law. Be sure to turn off your cellphone.



Watch out where you use your cellphone, and keep your voice down.

- Do not make calls at cinemas, theaters, museums, libraries, or other similar locations. Turn the cellphone off or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain permissions first.

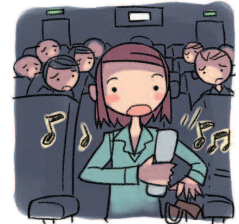

Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn your cellphone off when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities prohibiting the use or possession of cellphones.



Cellphone Basics

Features

Camera

Shoot photos, record movies, and send them by e-mail.

▶ Page 61



PC Site Viewer

View WEB sites created for viewing on PCs.

▶ Page 87



EZ Navi

EZ Navi Walk, Position Search, and Area Message allow you to get various kinds of location information. They are all built-in functions.

▶ Page 76

EZ FeliCa

Use the cellphone for shopping by using e-money, or use it as member's cards, point cards, and so on.

▶ Page 80


Hello Messenger

Enjoy meeting with the members using our original cartoon-like characters.

▶ Page 57



Safety Buzzer

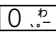Use W51P as high-volume emergency buzzer by holding down  for about one second on standby.

▶ Page 104



Mail

Send mail messages to other cellphones or to PCs.

▶ Page 47



EZ・FM

Enjoy listening to EZ・FM programs.

▶ Page 84



EZweb

Download "Chaku-Uta[®]", wallpaper, and other data.

▶ Page 68




Manner Mode and Easy Voice Memo

Manner Mode

Use Manner Mode to turn off the ring tone so as not to bother others around you.




While the standby screen is displayed, hold down マナー  for about one second.

▶ Page 33

Easy Voice Memo

If you cannot answer a call, Easy Voice Memo plays an answering message and records the caller's message.

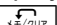

While the standby screen is displayed, hold down  for about one second.


▶ Page 34

Checking Power, Signal Strength, and Battery Level

Normally leave the phone turned on.




The phone needs to be turned on to make and receive calls.


Hold down  for at least 1.5 seconds to turn on W51P. After a while, W51P turns on with tone and the standby screen appears.

▶ Page 14

You cannot talk on the phone if it is unable to receive a signal.

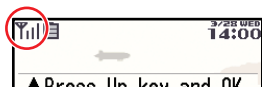

Signal strength is low in some areas, even if they are within the service area.

 indicates the current signal strength. ▶ Page 14

Keep an eye on the battery level.




The phone may not function properly if battery power is low.


 indicates the current battery level. ▶ Page 14

Never use your cellphone while driving!

Holding a cellphone in your hand, talking on a cellphone, or looking at a cellphone display to send mail or to perform any other operation while driving is prohibited by Japanese law.
(Revised Traffic Control Law, effective November 1, 2004)

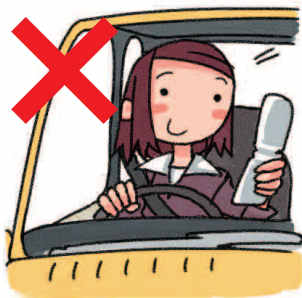

× Reading mail or looking at the display.

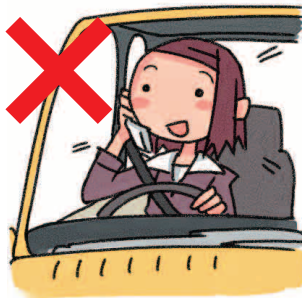

× Holding a cellphone in your hand to talk.

Turn off your cellphone or use Drive Mode while driving.

Drive Mode

In Drive Mode, the phone will play the message “ただいま車を運転しています...” (I am driving right now...), and ask the caller to leave a message using Easy Voice Memo.

While the standby screen is displayed, press マナー◀, and press 1 あ (ON). Next, press 2 か (Drive Mode) to enter Drive Mode.



Beware of spam and one-ring calls!

How to Combat Spam

You can set up mail filters to block specific mail or mail identified as “未承諾広告※” (unsolicited advertisement), which often includes spam.

Your cellphone has the following filters to block spam.


- ・ 未承諾広告フィルター
(unsolicited advertisement filter)
- ・ アドレスフィルター (address filters)
 - － 指定拒否設定 (blocks specific mail)
 - － 指定受信設定 (receives specific mail)



Page 54

 
Beware of one-ring calls!

A “one-ring call” (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

The  icon at the head of an incoming record indicates that the call

rang for only four seconds or less.

This indicates a possible “one-ring call.”



Page 29

Disaster Message Board Service

Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the “災害用伝言板” (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Checking the safety information

- ◆ Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.*
 - ※ Disaster Message Board information can be accessed from another type of cellphone, PHS, or PC at <http://dengon.ezweb.ne.jp/>.

How To Access




▶▶▶Top Menu ▶▶▶災害用伝言板

(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>



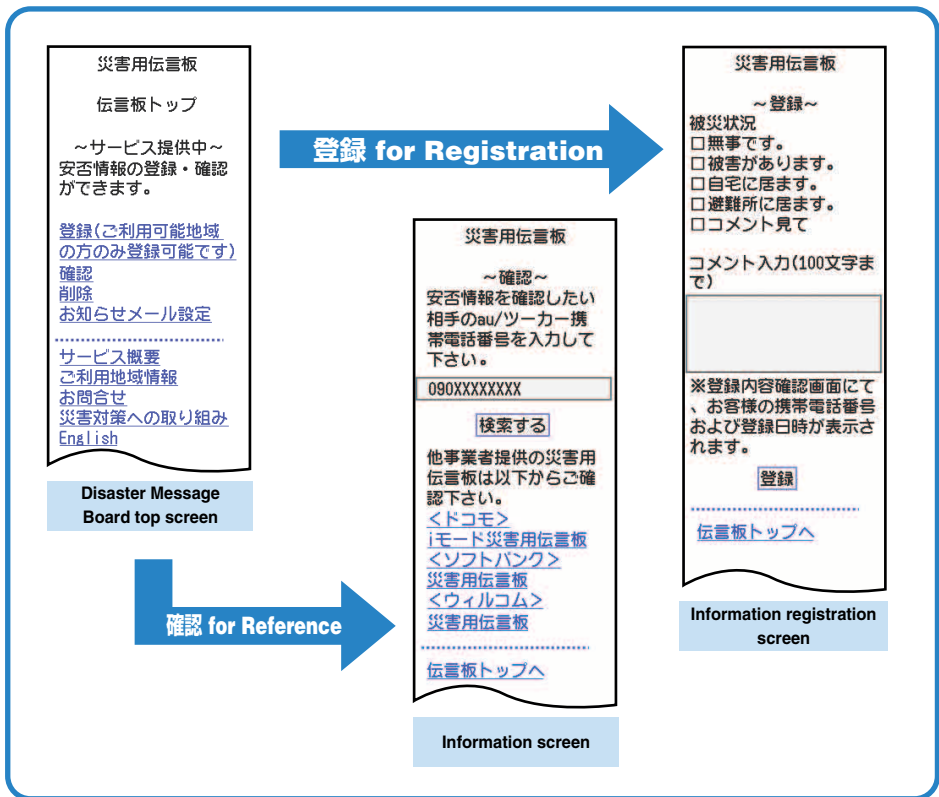

※ Registration contents are retained for up to 72 hours.

※ You can register up to 10 entries per phone number. Registering a new one while there are already 10, automatically overwrites the oldest.

※ You can view a Disaster Message Board demonstration at:

→ Top Menu → auお客さまサポート (au Customer Support) → 災害用伝言板(デモ版) (Disaster Message Board (Demo))

※ To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

Contents

Cellphone Etiquette	Mind your manners!	1
Cellphone Basics	Features	2
	Manner Mode and Easy Voice Memo	3
	Checking Power, Signal Strength, and Battery Level	3
	Never use your cellphone while driving!	4
	Beware of spam and one-ring calls!	5
	Disaster Message Board Service	6
Contents		8
Getting Ready	Checking the Contents of the Package	10
	Names of Parts	11
	Opening W51P by Using a Single Key (One-push Open)	12
	Charging the Battery	12
	Turning Power On	14
	Initial Values	14
	Security Code and Passwords	15
	Selecting English as the Display Language	16
	Basic Operations	18
	Display Indicators	19
	Main Menu	20
	Initializing E-mail and EZweb	22
	Checking Your Current Phone Number and E-mail Address	23
	Changing Your E-mail Address	24
Phone Call	Making a Call	26
	Making an International Call	27
	Answering a Call	28
	Redialing(Outgoing Records/Incoming Records)	29
	One-ring Calls	29
	Changing the Ring Tone	30
	Adjusting the Ring Tone Volume	32
	Adjusting the Earpiece Volume during a Call	33
	Turning On Manner Mode	33
	Turning On Easy Voice Memo	34
	Playing an Easy Voice Memo	35
Inputting Characters		36
	Inputting an E-mail Address	37
	Inputting Pictographs and Useful Sentences	38
Address Book	Registering an Address Book	40
	Editing an Address Book Record	42
	Adding Outgoing or Incoming Record Data to the Address Book ...	43
	Dialing from the Address Book	44
Pair Function	Registering a Pair Partner	45
	Making a Phone Call, Sending Mail, Invite a Pair Partner to a Hello Messenger Meeting	46
Mail	Using E-mail	47
	Using C-mail	48
	Creating and Sending E-mail Messages	49
	Reading Received E-mail Messages	51
	Reading an E-mail Message with Attached Photos or Movies	52
	Replying to a Received E-mail Message	53
	Avoiding Spam	54
	Creating and Sending C-mail Messages	55
	Reading Received C-mail Messages	56

Hello Messenger	57
Displays the Hello Messenger Menu	58
Invite the Members to the Meeting	59
When You Get an Invitation Message to Join	60
Camera Features	61
Camera	
Shooting a Photo	63
Recording a Movie	64
Viewing Photos and Movies	66
Attaching a Photo or Movie to an E-mail Message	67
EZweb	
Using EZweb	68
Displaying the EZ Top Menu	69
Bookmarking Sites You Frequently Access	70
Viewing a Bookmarked Site	71
Downloading Chaku-Uta®	72
Downloading Chaku-Uta-Full®	73
Checking Charges	74
EZ Channel-Plus/EZ Channel	75
EZ Navi Features	76
Security Navi Features	78
EZ FeliCa	80
Communicating with Reader/Writer	81
Setting FeliCa Lock	82
Using FeliCa-supported EZ apps	83
EZ•FM	
Before using an antenna	84
Listening to the EZ•FM	85
Listening to the EZ•FM as BGM/Stopping the EZ•FM	86
PC Site Viewer Features	87
PC Site Viewer	
Mastering Basic Operations	88
Using Standby Assignment	89
Simple Mode	
Entering Simple Mode	91
Exiting Simple Mode	92
Using the Simple Mode Main Menu	93
Adding Data to the Address Book in Simple Mode	94
Using the Address Book in Simple Mode	96
Creating and Sending E-mail Messages in Simple Mode	97
Shooting a Photo in Simple Mode	99
Viewing Photos in Simple Mode	100
Teens Mode	
Using Teens Mode	102
Activating Teens Mode	103
Other Functions	
Safety Buzzer	104
One-push Open	105
Troubleshooting	107
If you lose your W51P	108
Index	110


Getting Ready

Before using the W51P, check the contents of the package comes with your W51P.
Be prepared to the basic operations such as;
how to charge the battery, how to turn the
power on, etc.




Checking the Contents of the Package


● W51P

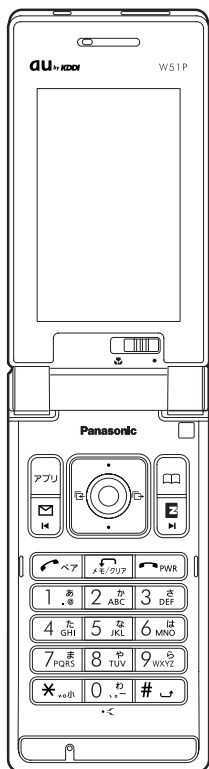


● Battery pack (51MAUAA)

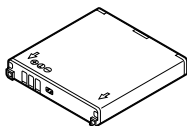


● Desktop holder (51MAPUA)

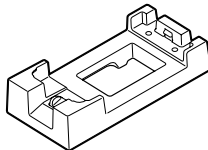

 
● Matsushita round-type earphone jack conversion adaptor 01 (01MAQNA)



● MDR-E0931SP/BC (sample) by SONY

 

● USB cable (sample)

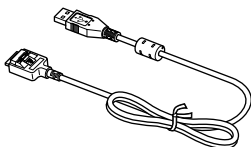

● CD-ROM



● Warranty (Japanese)

● Osaifu Keitai® Basic Manual (Japanese)

● LISMO install guide (Japanese)

● Basic Manual (Japanese)



● Operating Precautions (Japanese)

● Global Expert Owner's Guide (Japanese)

● Instruction Manual (Japanese)




Info

○ No microSD™ memory card is included.


○ No AC adaptor is included. Please purchase a common AC adaptor 01 (option) if you have non.

Names of Parts


Front

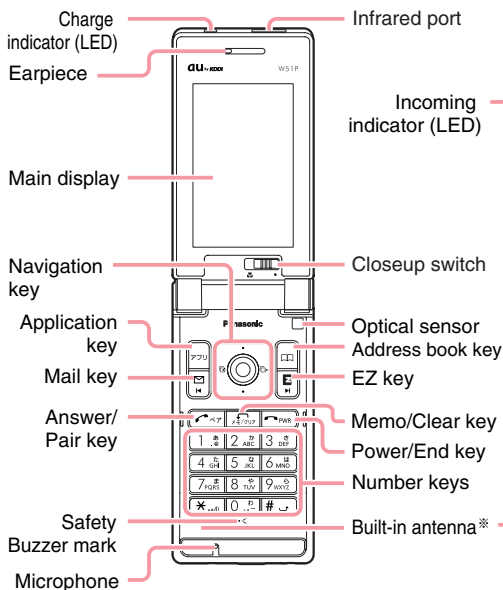

Back



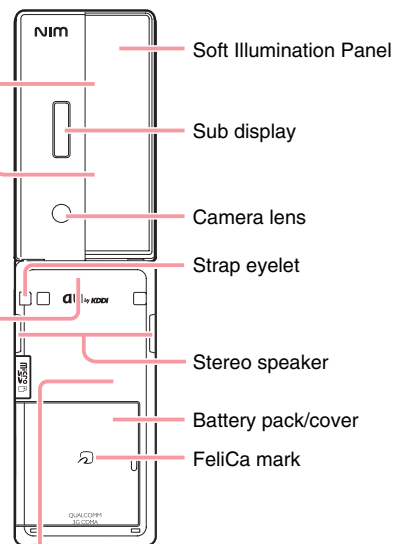


※ Do not cover the built-in antenna with your hand when using the phone, using EZweb, and when accessing GPS information.

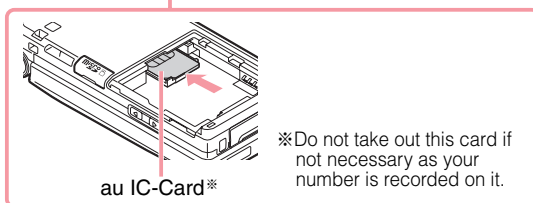

※ Do not take out this card if not necessary as your number is recorded on it.


Side

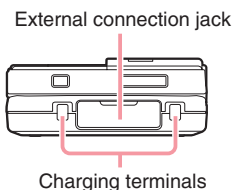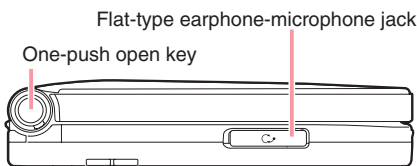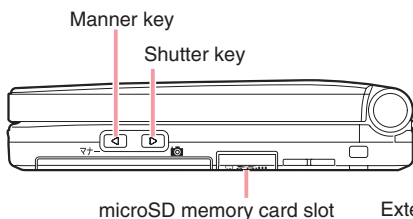

Opening W51P by Using a Single Key (One-push Open)

You can open the W51P easily by pressing the key. You can also open it manually without using the key.

- 1 Press the One-push open key.**

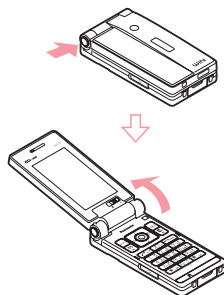



Info


- ◎ Your W51P might not open fully, depending on its direction.
- ◎ Be careful not to drop it by its rebound when opening your W51P by pressing the key.
- ◎ Be careful not to catch your fingers when opening your W51P.
- ◎ You need to close your W51P manually. If it does not close, once open it fully and close it.

Charging the Battery

The battery pack that comes with the phone is not fully charged when purchased. Be sure to charge the battery pack before using the W51P for the first time. Charging takes about 140 minutes.

You should recharge the battery pack whenever the battery level icon shows  or .

Check the shape of the connectors to ensure they are aligned correctly when you connect them.

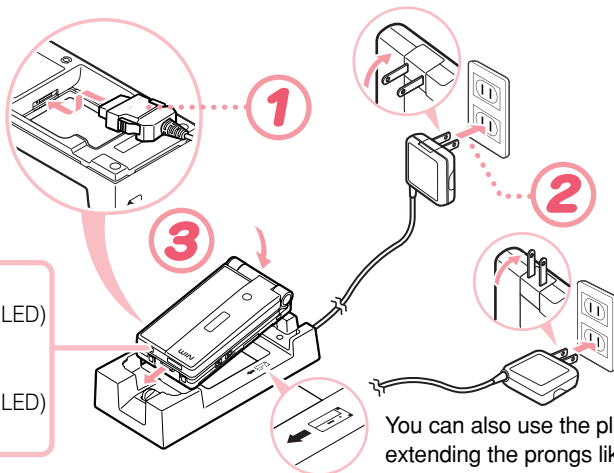

- **Charging**
: Charge indicator (LED) is lit red.
- **Charging completed**
: Charge indicator (LED) goes out.

You can also use the plug by extending the prongs like this.

8 CAUTION

- ◎ You must purchase a common AC adaptor 01 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- ◎ Pull out the connector of the common AC adaptor 01 (option) straight so as to be parallel to the W51P or the desktop holder connector terminal when you connect them.

1

Connect the common AC adaptor 01 (option) to the desktop holder.

Check the shape of the connectors to ensure they are aligned correctly before you connect.





Trying to force a connection may damage the connectors.


2

Fold out the power plug of the common AC adaptor 01 (option), and plug it into a 100V AC power outlet.

3


Insert the W51P into the desktop holder.

This will make the W51P charge indicator light red, and the battery level icon to change according to the following pattern:  →  →  → 

When charging is completed, the battery level icon will show  and the indicator will go out.

To remove the W51P from the desktop holder, holding the holder by hand and remove W51P.


※ You can connect the common AC adaptor 01 (option) to the W51P directly to charge the battery pack.

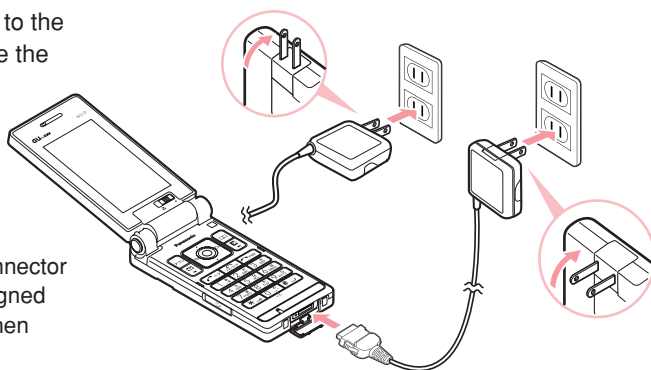

Check the shape of the connector ends to ensure they are aligned correctly (shown above) when connecting.

Turning Power On


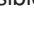
1

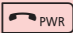




Hold down  for at least 1.5 seconds.


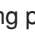

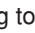




The standby screen appears.

Icon					
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range

- Communication is not possible while the signal strength icon is  (Out of Range).
- Communication may not be possible while the signal strength icon is  (Very Weak).


Icon					
Battery Level	Fully Charged	High	Medium	Low	Fully Discharged

- During charging, the battery level icon will change according to the following pattern:  →  →  → .
- The battery level icon  (Fully Charged) only shows during charging. () is shown on sub display)



Standby screen

Turning Power Off

Hold down  for at least 1.5 seconds.

Initial Values

The initial values are as follows.

Lock No.	1234	Font Size	Add Book Char	Middle
Teens Lock No.	1234		Input	Middle
Caller ID	ON		Mail Char	Middle
Incoming Display	ON		EZweb Char	Small
Profile	Blank		Data Folder Char	Middle
			Text Memo Char	Middle

Security Code and Passwords

The W51P lets you use the numbers and passwords described below. Do not forget your numbers and passwords. You will need them to perform various operations and to access subscription services.

Security Code

Usage Examples	① For remote operation of the Voice Mail and Call Transfer from a standard phone
	② For inquiries, applications, and service modifications using au Customer Service Center voice guidance, au website, and EZweb
	③ For changing e-mail settings
Initial Values	4-digit number you entered on your subscription contract

Lock No.

Usage Examples	For modifying various phone settings
Initial Values	1234

Teens Lock No.

Usage Examples	For modifying various phone settings in Teens Mode
Initial Values	1234


EZ Password


Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Values	The 4-digit number you entered on your subscription contract



Premium EZ Password



Usage Examples	① For entering and canceling subscriptions for EZweb fee-based content paid for using “まとめてau支払い” (au Collective Payment Service)
	② For purchasing products from EZweb sites that use “まとめてau支払い” (au Collective Payment Service)
Initial Values	The 4-digit number you entered on your subscription contract

Selecting English as the Display Language

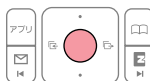
- 1** While the standby screen is displayed, press .



- 2** Use  to select “機能設定” (settings), and press  (OK).

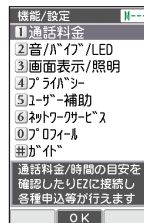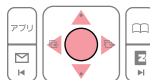


- 3** Press  (画面表示/照明) (ScreenSetup/DisplayLighting).

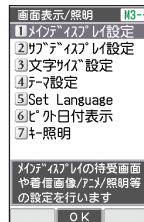

4

5 な JKL (Set Language).

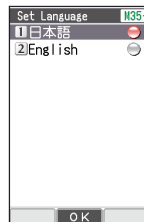

5

2 か ABC (English).

This selects English as the display language.



CAUTION

Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day format.

Basic Operations

■ Key functions

- Displays incoming records.
- Returns to the previous menu screen.
- Selects an item.


- Displays the standby shortcut icon.
- Selects an item.

- Displays the EZ apps menu.

- E-mail
- C-mail (hold down for about one second)

- Dials/answers a phone call.
- Displays the Pair function.

- Memo
- Toggles Easy Voice Memo on and off (hold down for about one second).
- Deletes a character.
- Returns to the previous menu screen.

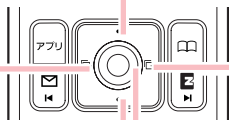

- Selects EZ news flash telop/window.
- Selects an item.

- Displays outgoing records.
- Scrolls forward one menu screen.
- Selects an item.


- Displays the main menu.
- Applies an item.

- Displays the address book.
- Creates a new address book (hold down for about one second).

- Displays the EZ menu.

- Toggles power on and off (hold down for about 1.5 seconds).
- Hangs up.
- Terminates a function.
- Returns to the standby screen.


- Inputs phone number.
- Inputs text character.

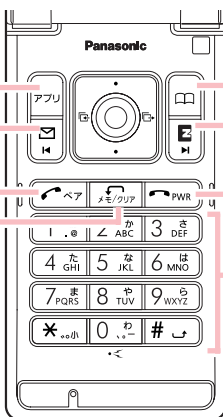

■ Side key functions

- Toggles Manner Mode on and off (hold down for about one second).

 - Shutter
- Starts photo (hold down for about one second).





Info

- If you lose track of where you are or if you make a mistake, press to scroll back to the previous, press to return to the standby screen.
- When is in the lower right corner of the photo or movie screen, pressing will display key help.
- Holding down for about one second toggles side key's disabling feature on and off while W51P is folded. To cancel the side key's disabling feature, follow the procedure above with W51P opened.


Display Indicators

The following explains the main icons that appear on the standby screen.

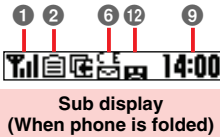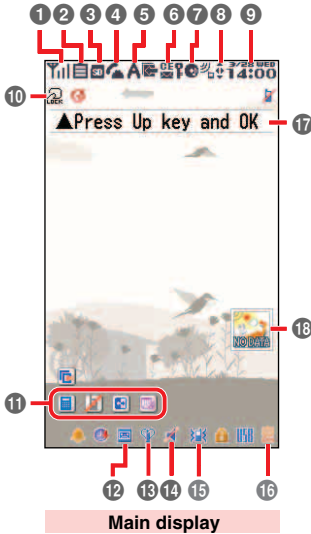





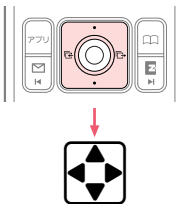






1		Signal strength
2		Battery level
3		A microSD™ memory card (commercial item) is inserted into the cellphone.
4		During a call
5		EZ apps (BREW®)/Hello Messenger on
6		Unread mail
7		au Music Player/SD-Audio Player/EZ-FM on
8		Key guidance on the EZweb screen (while browsing) or the EZ Channel-Plus program screen (while playback), etc.
9		Current time The date and time are set automatically.
10		FeliCa Lock on
11		Selects the user defined icons such as calculator, Emission Off Mode, Mode Settings, Note Pad 01 by pressing and
12		Easy Voice Memo on
13		Manner Mode on
14		Ring tone off
15		Vibrator on
16		EZ Channel-Plus is in use.
17		EZ news flash telop
18		EZ news flash window

Key symbols used in this manual





The navigation key in this manual is described with the key symbols shown below.


	or		key:					
	or		key:					
	,		,		or		key:	


Main Menu


Pressing  while the standby screen is displayed displays the main menu. Use  to select the icon, and press  (OK) to access the function associated with the icon.

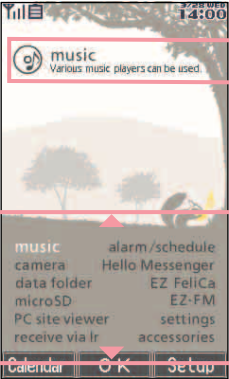



**music**
Various music players can be used


**camera**
Photo/movie/barcode reader can be used


**data folder**
Displays data in W51P


**microSD**
Displays data in the microSD™ memory card


**PC site viewer**
The WEB site for PC can be seen


**receive via Ir**
Various data can be received via Ir


**alarm/schedule**
Alarm/Schedule function can be used

**Hello Messenger**
Communicates with characters/voice/photo

**EZ FeliCa**
EZ FeliCa can be used/set

**EZ-FM**
FM radio can be listened

**settings**
Various settings can be customized


**accessories**
Various useful functions can be used


Info




Main menu and icons are different from those in the illustrations above according to the body color of your handset.

Using the Main Menu

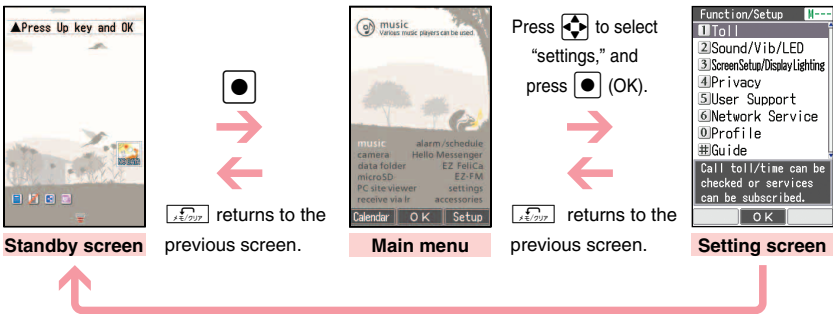Example: To display the setting screen from the main menu.

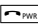


 returns to the standby screen.

Left soft key		Executes the function on the left.
Center soft key		Executes the function on the center.
Right soft key		Executes the function on the right.

■ Using Menus


Example: To open the photo monitor menu screen from photo monitor screen.

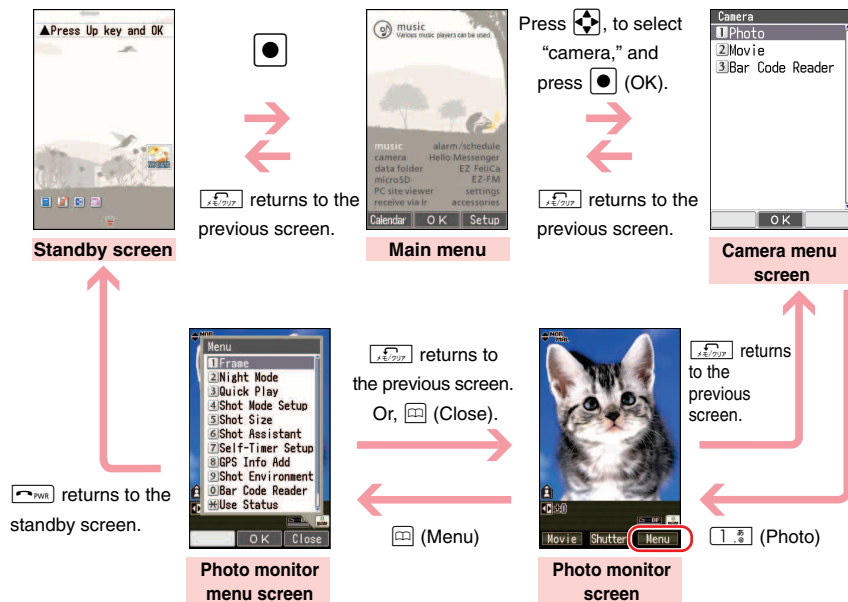

Initializing E-mail and EZweb

An EZweb subscription is required to use e-mail and EZweb. If you did not subscribe when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

※ You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.

 
1 While the standby screen is displayed, press .



EZwebを利用するための
初期設定を行います。
PCサイト「ユーザー」の初期設定
も行われます。
OKを押してしばらく
お待ちください。
OK


2 Press  (OK).


Wait until the phone connects to the server for initialization.



ようこそEZwebへ
お客様のEメールは、
XXXXXXXXXX@ezweb.ne.jp
です。
-ヒント-
Eメールのアドレスの変更は「OK」押
下後にEメール→Eメール設定
→その他の設定にて行
ってください。

auの「おまかせ」サービス
(全て情報料無料)
● au My Page ●
au My Pageに登録頂くと
あなただけのページに帰
OK

 3 After your automatically assigned e-mail address appears, press  (OK).




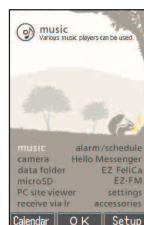
 
Info



Pressing /  also allows you to make initial settings.


 
Checking Your Current Phone Number and E-mail Address




- 1** While the standby screen is displayed, press .




- 2** Use  to select “settings,” and press  (OK).

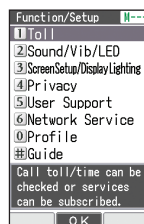
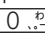


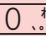- 3** Press  (Profile).


Your current phone number and e-mail address appear.

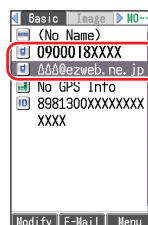



Info

Your phone number and e-mail address can be checked by pressing , and  while the standby screen is displayed.



Changing Your E-mail Address

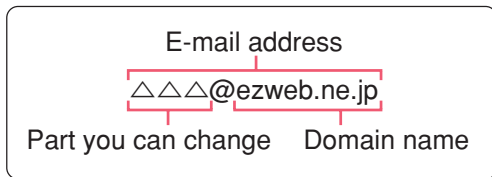

 1 While the standby screen is displayed, press .

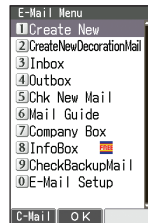


2 Press (E-Mail Setup).

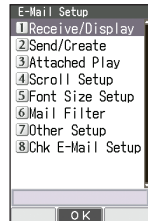
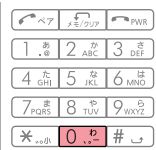




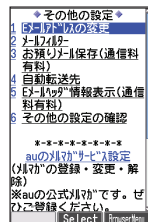


3 Press (Other Setup).

 When the EZweb connection confirmation screen appears, press (Yes).

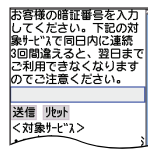

4 Press (E メールアドレスの変更) (Change E-mail Address).



- 5** Enter your Security Code, press  (OK), use  to select “送信” (Send), and press  (Select). Use  to select “承諾する” (Accept), and press  (Select).






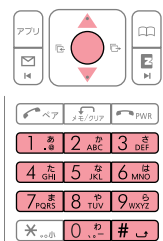
メールアドレスを変更します。
ご希望のメールアドレスを入力してください。

※入力時の注意※
1. 半角英数小文字で「@ezweb.ne.jp」より左側のみご入力ください。
2. Eメールアドレスは半角英数字30文字まで入力可能です。

記号は「.」、「-」、「_」が使用可能です。「.」は最初には利用できません。最初に数字の「0」を使用することはできません。

Back Browser Menu

- 6** Use  to select the text box, and press  (Edit). Enter the e-mail address you want, and press  (OK).



2. Eメールアドレスは半角英数字30文字まで入力可能です。

記号は「.」、「-」、「_」が使用可能です。「.」は最初には利用できません。最初に数字の「0」を使用することはできません。



AAAAAA@ezweb.ne.jp


送信 リセット

前のページへ

Select Browser Menu

To input an e-mail address
→ “Inputting an E-mail Address” (page 37)

- 7** Use  to select “送信” (Send), and press  (Select).

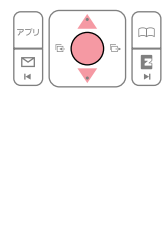


新しいEメールアドレスは
AAAAAA@ezweb.ne.jp
です。
よろしいですか？

OK キャンセル

Select Browser Menu

The e-mail address confirmation screen appears.

- 8** Press  to select “OK,” and press  (Select).

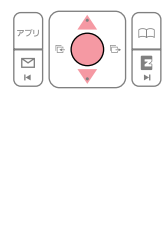

The message “正常に変更されました。” (Update is complete.) appears to indicate that your e-mail address has been changed.



Info


- ◎ Your Security Code is the 4-digit number you entered on your subscription contract. If the wrong Security Code is entered three times a day, the setting operation will be disabled until the following day.
- ◎ If your e-mail address won't change in step 7:
The new e-mail address you entered may be registered by someone else already. Try entering a different address.

Phone Call

Making a Call

1

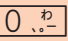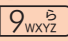
While the standby screen is displayed, use the number keys ( to ) of the keypad to enter the phone number you want to call.

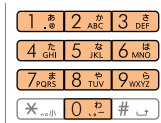

When calling a standard phone, you need to enter the area code.

2

Press .

After you finish a call, press  to hang up.

※ The caller always hears your voice even when you cover the microphone with your hands.



Send Methods

Displayed when you press  (Call) in step 2.

Call : Your phone number is provided to the party you are calling in accordance with the caller ID setting of your phone.

184 Add : Your phone number is not provided to the party you are calling.


186 Add : Your phone number is provided to the party you are calling.

Making an International Call

■ au International Call Service

Available without any additional application

Ex: To call 212-123-△△△△ in the USA

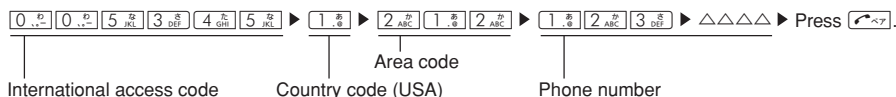


- Calling charges for this service are added to monthly mobile phone calling charges and billed together.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.


■ 001 KOKUSAI MOBILE TALK

Application required.

For inquiries, please contact the KDDI Customer Service Center.


 **0077-7160** (toll-free; open 9:00 to 20:00 everyday including weekends and national holidays)


Ex: To call 212-123-△△△△ in the USA

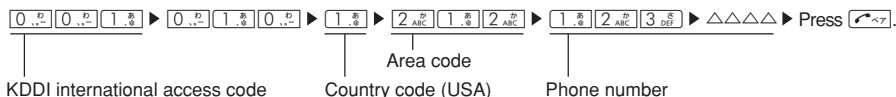

- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Service Center.
- For charges, please refer to the au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

Answering a Call

1 Press  **べア** to answer an incoming call.

After you finish a call, press  **PWR** to hang up.




Info

You can also answer the call just by opening W51P.

Display for Incoming Calls



If the caller's name is in your address book, it appears on the display. If not, only the caller's phone number is displayed.

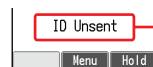


A message appears when the phone number of the caller is not provided for some reason.



ID Unsent : The caller's phone refused to send its phone number.

Pay Phone : The call is from a pay phone.

Not Support : The call is from a phone that does not support caller ID.

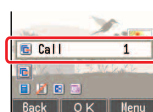Missed Call Notification



The message " Call X" appears on the display if you did not answer one or more calls. Press  (OK) to check incoming records (caller phone number, etc.).

To redial a number

→ "Redialing (Outgoing Records/Incoming Records)"
(page 29)




Redialing (Outgoing Records/ Incoming Records)

1 While the standby screen is displayed, press .


 : Displays outgoing records.

 : Displays incoming records.

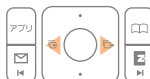

Incoming	Outgoing
01 3/28Wed10:53	Chris Tait
02 3/28Wed10:40	Mark Brown 02
03 3/28Wed10:28	030001XXXX
04 3/28Wed10:11	Betty Mason
05 3/27Tue21:25	Play VM
Photo	Disp Menu

2 Use to select the record whose number you want to dial, and press

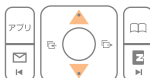

Info

The phone stores up to 50 records each for the outgoing records and incoming records. When a record is created while there are already 50 in memory, the oldest is deleted automatically to make room for the new one.



One-ring Calls

What is a “one-ring call”?

A “one-ring call” is an incoming call that rings your phone only once, which aims it to be stored in your incoming records. If you redial the number shown in your incoming records, often you are connected to a dating service or some other service that may bills you very high charges. Always keep in mind that it is not a good idea to call back unfamiliar numbers.


One-ring call indicator



Incoming	Outgoing
01 3/28Wed11:00	0900001XXXX
02 3/28Wed10:45	



The  icon indicates an incoming call you did not answer. The  icon indicates an incoming call that rang for four seconds or less, which may be one-ring call with high possibility.



Changing the Ring Tone

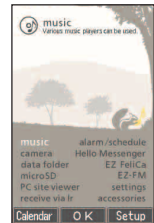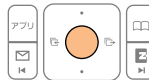



- 1 While the standby screen is displayed, press .





- 2 Use  to select "settings," and press  (OK).

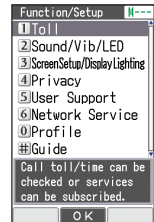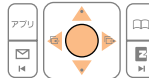

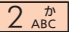
- 3 Press  (Sound/Vib/LED).

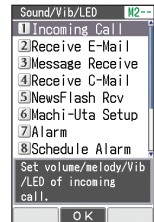

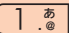- 4 Press  (Incoming Call).

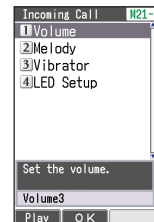


5 Press **2** か ABC (Melody).

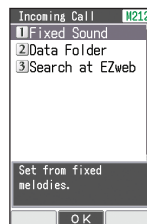


6 Press **1** あ .@ (Fixed Sound).

To hear the currently selected ring tone, press **アフリ** (Check).

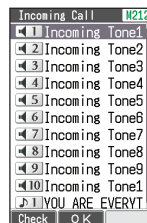

7 Use **↑↓** to select the ring tone you want, and press **●** (OK).

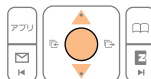

The ring tone is set.

Info


- ◎ The initial setting is “Incoming Tone1.”
- ◎ You can also download a “Chaku-Uta®” from the Internet and use it for your ring tone.
→ “Downloading Chaku-Uta®” (page 72)

Adjusting the Ring Tone Volume



To adjust the ring tone volume, perform steps 1 through 3 under “Changing the Ring Tone” (page 30), and continue with the following steps.

1 Press **1** **あ** (Incoming Call).

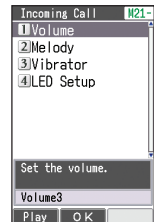

2 Press **1** **あ** (Volume).


To hear the ring tone at the current volume setting, press **ア** (Play).



3 Use **▲** to adjust the ring tone volume, and press **●** (OK).

▲ : Increases volume.

▼ : Decreases volume.

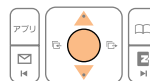

Info

Step-up : Ring tone volume gradually increases.

Step-down: Ring tone volume gradually decreases.


Mute : Ring tone does not sound.

To display the “Step-up” and “Step-down” settings, select volume level 5, and press **▲**.

To display the “Mute” setting, select volume level 1, and press **▼**.


Adjusting the Earpiece Volume during a Call




1 During a call, use  to adjust the volume.

 : Increases volume.

 : Decreases volume.

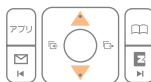


You can adjust the earpiece volume (level 1-6).


When you set the maximum volume (level 6),  is displayed on the screen.


 
Turning On Manner Mode


While Manner Mode is on, the phone alerts you to incoming calls by vibrating.



1 While the standby screen is displayed, hold down マナー  for about one second.

When Manner Mode is on, the  icon appears on the display.

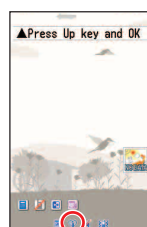


Turning on Manner Mode also turns on Easy Voice Memo, which is indicated by  on the display.

While Manner Mode is on, the phone vibrates without sounding its ring tone.


To turn off Manner Mode, hold down マナー  for about one second.

Turning On Easy Voice Memo

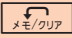


1 While the standby screen is displayed, hold down  for about one second.



When Easy Voice Memo is on, the  icon appears on the display.

W51P can store up to 4 Easy Voice Memos, each of which can contain up to 20 seconds recording time.

If a new Easy Voice Memo is recorded when there are already four in the memory, the oldest, unprotected, and has already been played back is deleted automatically to make room for the new one. Protected Easy Voice Memos are not deleted.

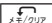To turn off Easy Voice Memo, hold down  for about one second.

Info

Using the Voice Mail


The Voice Mail allows callers, who could not reach you to leave voice messages, when the phone is turned off, or when you are not in a location within the range of the service with adequate signal strength.

Playing an Easy Voice Memo





When Easy Voice Memos are stored

The messages “ Call” and “ EasyVoiceMemo” appear on the standby screen.

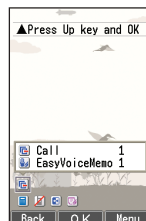



- 1 Select “ Call,” and press (OK).

The incoming records list appears.

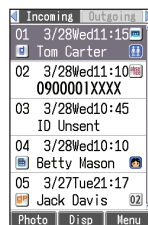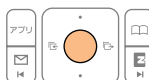


- 2 Use to select the record with the icon, and press (Disp).

The incoming record detail screen appears.

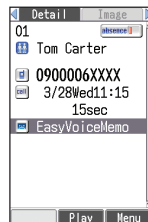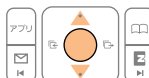

- 3 Use to select “ EasyVoiceMemo,” and press (Play).

The easy voice memo plays back.

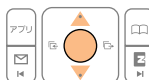

Info

To delete an Easy Voice Memo, press while the standby screen is displayed. Select the Easy Voice Memo you want to delete, press (Menu), and (Delete). Next press (Delete One), and press (Yes).

Inputting Characters

Input characters using keypad keys 0 わ through 9 WXYZ.

The table below shows the characters each key cycles through when you press it.



Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
1 あ. 0	.	@	-	_	/	:	~	1	
2 か ABC	a	b	c	A	B	C	2		
3 き DEF	d	e	f	D	E	F	3		
4 こ GHI	g	h	i	G	H	I	4		
5 な JKL	j	k	l	J	K	L	5		
6 は MNO	m	n	o	M	N	O	6		
7 ぱ PQRS	p	q	r	s	P	Q	R	S	7
8 や TUV	t	u	v	T	U	V	8		
9 ろ WXYZ	w	x	y	z	W	X	Y	Z	9
0 わ	0 . @ - _ / : ! ? ~ () * # + , ^ ; < = > \$ ¥ % & [] ' ` { } ~								
* 変換	Toggles between upper case and lower case (Example: a ⇔ A).								
# 戻る	Returns to the previous character.								
↶ 削除	Undoes the last delete operation.								

- In order to input consecutive characters that are assigned to the same key, press ▶ to move the cursor (highlighted), then press the same key to input next character.

⚠ CAUTION

Allowable Characters in Your E-mail Address

Your e-mail address (the part at the left of “@”) can contain up to 30 characters, including single-byte English lower case letters, hyphens (-), periods (.) and underbars (_).

A period (.) or a zero (0) cannot be used as the first character.

Characters and symbols that are shaded in the table above cannot be used at the left of “@” in the address format “△△△@ezweb.ne.jp.”

Info

You can input a period (.) or “at” symbol (@) by pressing 1 あ..

Inputting an E-mail Address

Inputting “mark@ezweb.ne.jp”

In this example, we will input “mark@ezweb.ne.jp” for “<E-Mail Add1>.” To input “<E-Mail Add1>,” perform steps 1 through 6 under “Registering an Address Book” (page 40), and perform the following steps.



1


Input “mark.”

To input “m”: Press **6** は MNO once.
 To input “a”: Press **2** か ABC once.
 To input “r”: Press **7** ま PQRS three times.
 To input “k”: Press **5** な JKL twice.



2

Press (Menu).

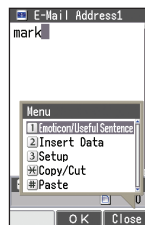

3



Press **1** あ (Emoticon/Useful Sentence), and **2** か (Useful Sentence).



4

Use to select “@ezweb.ne.jp,” and press (OK).

“mark@ezweb.ne.jp” is inputted.
 You could also input “@ezweb.ne.jp” by pressing **0** わ **2** か.

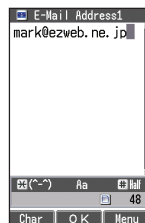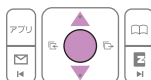

Inputting Pictographs and Useful Sentences




The following procedure shows how to input pictographs and useful sentences into the body text when creating a new e-mail message.

1

Press **アプリ** (Char), and **は** (Pictograph).


You can also select a pictograph by pressing **#**.

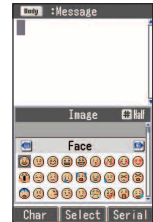

2

Use **⬆** to select the pictograph you want, and press **●** (Select).

Use **⬅** and **➡** to scroll through the various categories of pictographs. To input consecutive pictographs, press **⌂** (Serial).

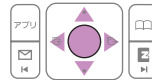







3


Press **⌂** (Menu), **1 あ** (Emoticon/Useful Sentence), and **2 か** (Useful Sentence).



4

Use  to select the useful sentence you want, and press  (OK).

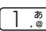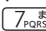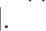Here we will select “Happy birthday!.”
You can also input “Happy birthday!” by pressing    .

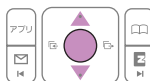
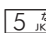
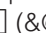


Info


The following shows the input screens for symbols (double-byte) and emoticons.








Inputting Symbols (Double-byte)



In step 1 of the procedure above, press  (Char), and   (&@) to display the “FullSym” (double-byte symbol menu).

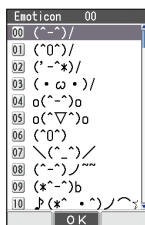Inputting Emoticons

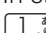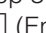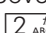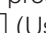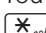

In step 3 of the procedure above, press   (Emoticon) in place of   (Useful Sentence) to display the emoticon menu.
You can also display the emoticon menu by pressing   in place of  (Menu) in step 3.

Address Book



Registering an Address Book



- While the standby screen is displayed, hold down for about one second.





- Select " <Name>," and press (Edit).

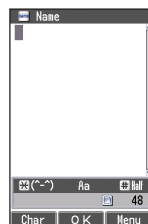
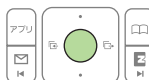


- Enter the name, and press (OK).

The <Reading> is generated automatically when you enter a name.
To input text
→ "Inputting Characters" (page 36)

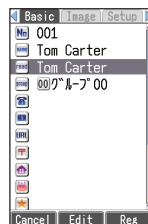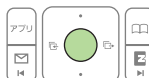

- Use to select " <Phone Number1>," and press (Edit).

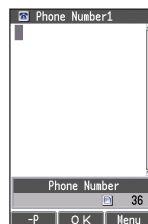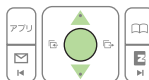


5 Enter the phone number, and press (OK).

When entering the number of a standard phone, be sure to include the area code.




6 Use to select "<E-Mail Add1>," and press (Edit).

If you do not want to enter an e-mail address, jump to step 8.

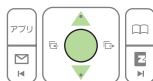


7 Enter the e-mail address, and press (OK).

To input an e-mail address
→ "Inputting an E-mail Address"
(page 37)

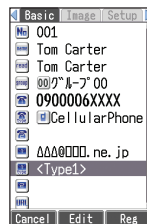

8 Press (Reg).

 




Info



- ◎ The Address Book can contain up to 700 records.
- ◎ Address Book Records are numbered from 000 through 699. A new record is automatically assigned to the lowest available unused record number.
- ◎ An Address Book Record can also contain a website URL, street address, birthday, and other personal information.

Editing an Address Book Record


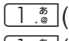
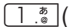


Example: To edit the phone number of “Tom Carter”

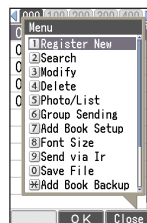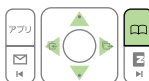


- While the standby screen is displayed, press , use  to select the record you want to edit, and press  (Menu).






- Press  (Modify), and  (Overwrite).

To delete an address book record, press  (Delete), and press  (Delete One). Next, press  (Yes).


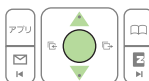


- Use  to select “ 0900006XXXX,” and press  (Edit).






- Make the changes you want, press  (OK), and  (Reg).

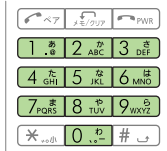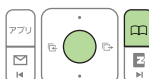

To delete characters, press .





Adding Outgoing or Incoming Record Data to the Address Book





1 While the standby screen is displayed, press , use  to select the phone number you want to save, and press  (Menu).

-  : Displays outgoing records.
-  : Displays incoming records.

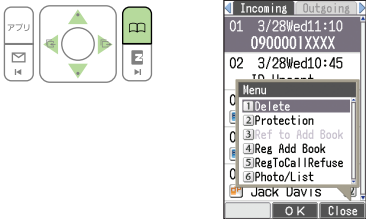


2 Press  (Reg Add Book).

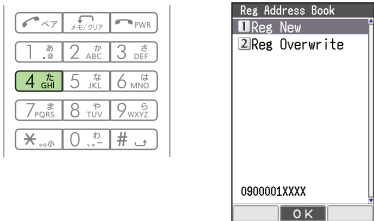

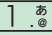

3 Press  (Reg New).

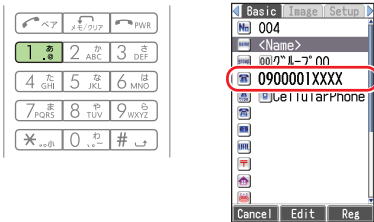To enter the name, use the procedure starting from step 2 under “Registering an Address Book” (page 40).



Dialing from the Address Book







- 1 While the standby screen is displayed, press , and use  to select the record whose phone number you want to dial.



- 2 Press  (Disp).

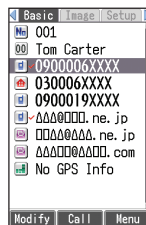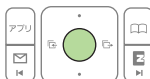The details screen of the record appears.



- 3 Use  to select the phone number, and press .



Pair Function



You can save up to five phone numbers (like frequently used ones from the address book). You can make calls, send mails to or use Hello Messenger with these saved numbers (called Pair Partners) more easily.



Registering a Pair Partner

1 While the standby screen is displayed, press .


If the Pair partner is not registered, the confirmation screen appears. Press (OK). Use to select the 1 through 5 tab where you want to register the Pair partner.





2 Use to select "Register-Check," and press (OK).

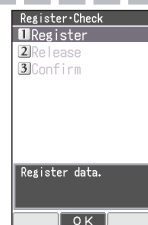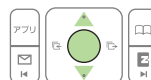

3 Press (Register).

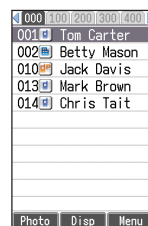


4 Use to select the address book record for the person you want to register as a Pair partner, and press (Select).

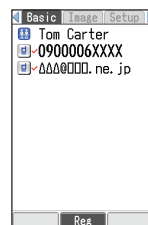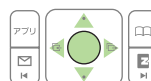

When there is more than one phone number/e-mail address registered in the address book, the Pair function phone number/e-mail address selection screen will appear.


5 Press (Reg).

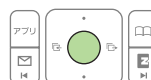


Making a Phone Call, Sending Mail, Invite a Pair Partner to a Hello Messenger Meeting




- 1** While the standby screen is displayed, press **ベア**.

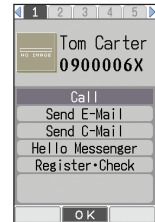

- 2** Use to select the Pair partner.

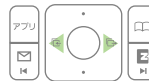

- 3** Use to select "Call," and press (OK).

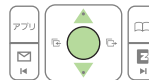

Sending e-mail : After selecting "Send E-Mail" and pressing (OK), selecting "Create New" and pressing (OK) will display a screen for a composing and sending an e-mail message.

Sending C-mail : Selecting "Send C-Mail" and pressing (OK), will display a screen for a composing and sending a C-mail message.

Hello Messenger : Selecting "Hello Messenger", pressing (OK) will display the screen for inviting a Pair partner to a Hello Messenger meeting.

For the subsequent procedure, refer to "Creating and sending E-mail Messages" (page 49) / "Creating and sending C-mail Messages" (page 55) / "Invite the Members to the Meeting" (page 59).

Info

In order to register a person as a Pair partner, whose name, phone number, and other information need to be registered in the address book beforehand. Use the procedure under "Registering an Address Book" (page 40) to create the required record before trying to register a person as a Pair partner.



Your W51P supports two types of mail:
e-mail and C-mail.

Using E-mail

To use e-mail, EZweb subscription is required. If you did not subscribe when purchasing your phone, contact your nearest au shop or the au Customer Service Center.


In addition to EZweb subscription, an initialization procedure is needed before you can use e-mail. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 22).

E-mail service allows you to exchange e-mail messages with other E-mail-enabled cellphones or e-mail addresses of PC.

You can send e-mail messages that contain up to 5,000 double-byte characters (10,000 single-byte characters), and you can attach photos and movies to e-mail messages.

Page 49

- ※ You can send an e-mail up to five addressees at a time.
- ※ You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- ※ Sending and receiving operations may take longer when an e-mail message has attachment.

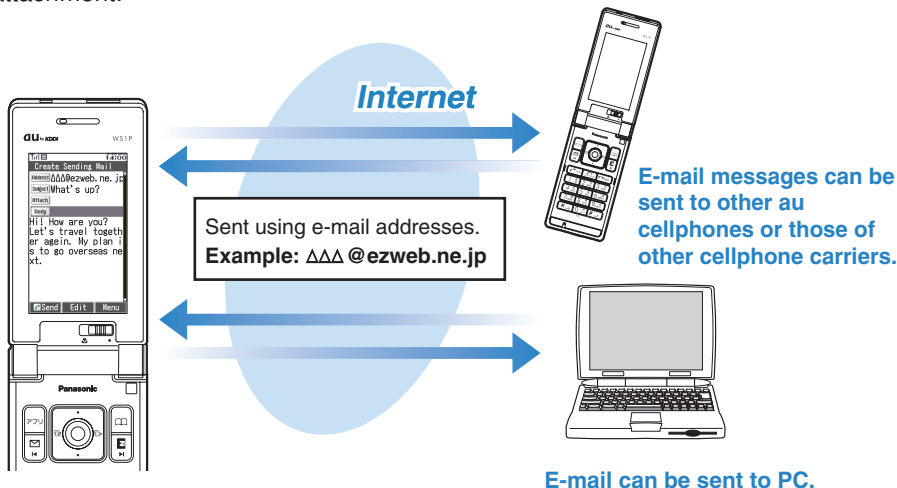

Using C-mail

C-mail service allows you to exchange text messages containing up to 50 double-byte characters (100 single-byte characters) with other C-mail-enabled au cellphones.


Page 55



C-mail Center

To the recipient's phone number.
Example: 090-0001-XXXX

To your phone number.
Example: 090-0002-XXXX

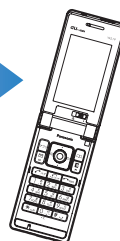

C-mail can be sent to other C-mail-enabled au cellphones.


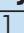
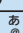
About C-mail Safety Block


- C-mail Safety Block blocks C-mails that contain accessing URLs (<http://△△△>, <https://△△△>) or phone numbers in their body texts. C-mail Safety Block is activated by default. If you want to receive C-mails containing accessing URLs or phone numbers in their body texts, you can deactivate this function.

Creating and Sending E-mail Messages






1

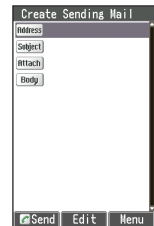While the standby screen is displayed, press , and press   (Create New).





2





Select , and press  (Edit).

 : Address to which the e-mail will be sent.

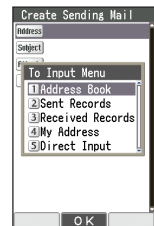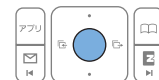
You can send an e-mail up to five addressees at a time.



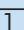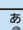

3


Press   (Address Book), use  to select an addressee, and press  (Select).

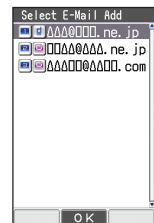

You can select an addressee from sending records, receiving records, or My Address, or you can enter an address.




4

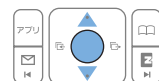


Use  to select the e-mail address you want to enter, and press  (OK).




5 Use  to select **Subject**, and press  (Edit).

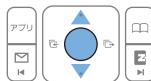
Subject: Subject of the e-mail message.





6 Enter the subject, and press  (OK).
Use  to select **Body**, and press  (Edit).

Body: Body of the e-mail message.

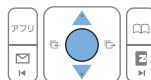

7 Enter the body text, and press  (OK).

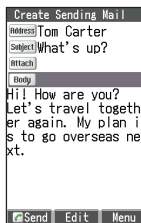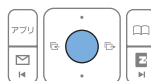

8 Press  (Send) or .

The message "Sent." appears on the display after the e-mail message is sent.




Reading Received E-mail Messages



When you receive an e-mail

“ E-Mail” and appear on the standby screen.


Received e-mail icon

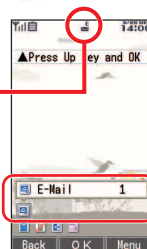

Mail

1

Select “ E-Mail,” and press (OK).


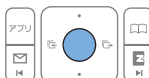


2

Press (OK).

: Indicates an unread message.

: Indicates an already read message.

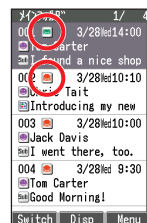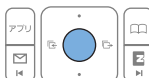



3

Use to select the unread e-mail you want to view, and press (Disp).

The received e-mail message appears. If all of the message cannot be displayed, press to scroll.

Use and to scroll between messages.

Press to return to the e-mail message list.

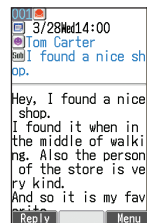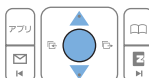

Info



You can also enable to show the received e-mail message by opening W51P.


Reading an E-mail Message with Attached Photos or Movies





Example: To see a photo attached to an e-mail.


1

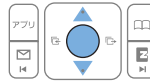Use  to select the e-mail message, and press  (Disp).





2

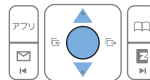Use  to select a file name, and press  (Play).



Info


- ◎ Depending on the size, the photo or movie file may not appear in step 2 of the procedure above. If this happens, select the file name, press  (Rcv), and  (Play).
- ◎ Sending and receiving operations may take longer when an e-mail message has attachment.
- ◎ Certain signal conditions may also cause slow work sending/receiving e-mails.


Replying to a Received E-mail Message


To reply to an e-mail message, perform steps 1 through 3 under “Reading Received E-mail Messages” (page 51), and perform the following steps.



1 Press  (Reply).

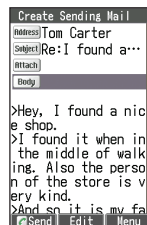

2 Press  (Edit), and enter the body text.

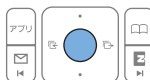

Subject is prefixed with “Re:,” and the body text of the e-mail is quoted.
For the remainder of this procedure
→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages” (page 49).



Avoiding Spam

It is recommended that you use our mail filter function to block spam.


You can activate mail filter easily using “Supportive settings” by answering questions that appear on the display.



■ Activating Mail Filter


Example: To access “サポート設定” (Supportive settings)

- ① While the standby screen is displayed, press .
 - ② Press → → (Yes).
 - ③ Use to select “次へ” and press (Select).
 - ④ Enter your Security Code, press (OK).
→ Use to select “送信” and press (Select).
- Next, follow the instructions that appear on the display.

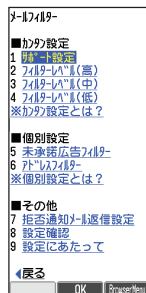

■ “カンタン設定” (Simple Settings)

“サポート設定” (Supportive settings)	You can choose filtering options by answering our questions. It is recommendable for those who want to check the filtering conditions one by one.
“フィルターレベル(高)” (Filter level (Strict))	You can block all the incoming mails from PC. It is recommendable for those who use only cellphones to send/receive e-mails.
“フィルターレベル(中)” (Filter level (Medium))	You can block the incoming e-mails from specified senders. It is recommendable for those who are bothered by specified spam senders.
“フィルターレベル(低)” (Filter level (Normal))	You can block the incoming e-mails containing “未承諾広告※” (Unsolicited advertisement) in their titles, and “なりすましメール” (Spoof e-mail) It is recommendable for all e-mail users.

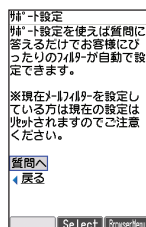




Info

You can prevent spam by changing your e-mail address. See “Changing Your E-mail Address” (page 24) for information about how to change your e-mail address.

Creating and Sending C-mail Messages





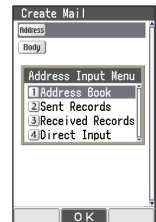
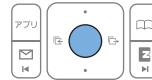
1

While the standby screen is displayed, hold down  for about one second, and press   (Create New).


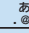


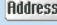

2

Select , and press  (Edit).





3


Press   (Address Book), use  to select an addressee, and press  (Select).

You can also select a phone number from sending/receiving records, or you can enter an address.




4

Use  to select the phone number you want to enter, and press  (OK).

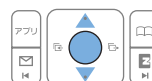

5 Use to select **Body**, and press (Edit). Enter the body text, and press (OK).

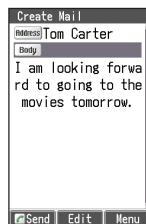

6 Press (Send) or .

When the C-mail reaches the other party, the message “Completed.” appears, and the message is stored in your sending records.




Reading Received C-mail Messages

When you receive a C-mail



“ C-Mail” and appear on the standby screen.

Received C-mail icon

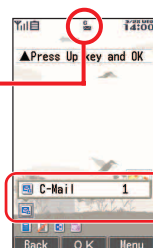



1 Select “ C-Mail,” and press (OK).

: Indicates an unread message.

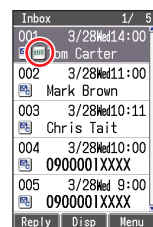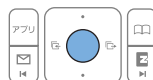

2 Use to select the unread C-mail you want to view, and press (Disp).

The received C-mail message appears.
Use and to scroll between messages.
Press to return to the C-mail message list.

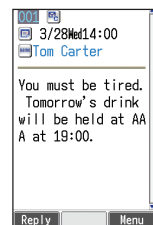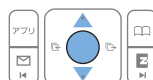


Info

You can also enable to show the received C-mail message by opening W51P.

Hello Messenger

“Hello Messenger” is like a portable chat room which allows you to send text, sound and photo in real time to all the chatters (using au cellphone supporting this service).


All chatters are represented by cartoon-style characters they selected. The host can invite up to 4 people from the address book entries.


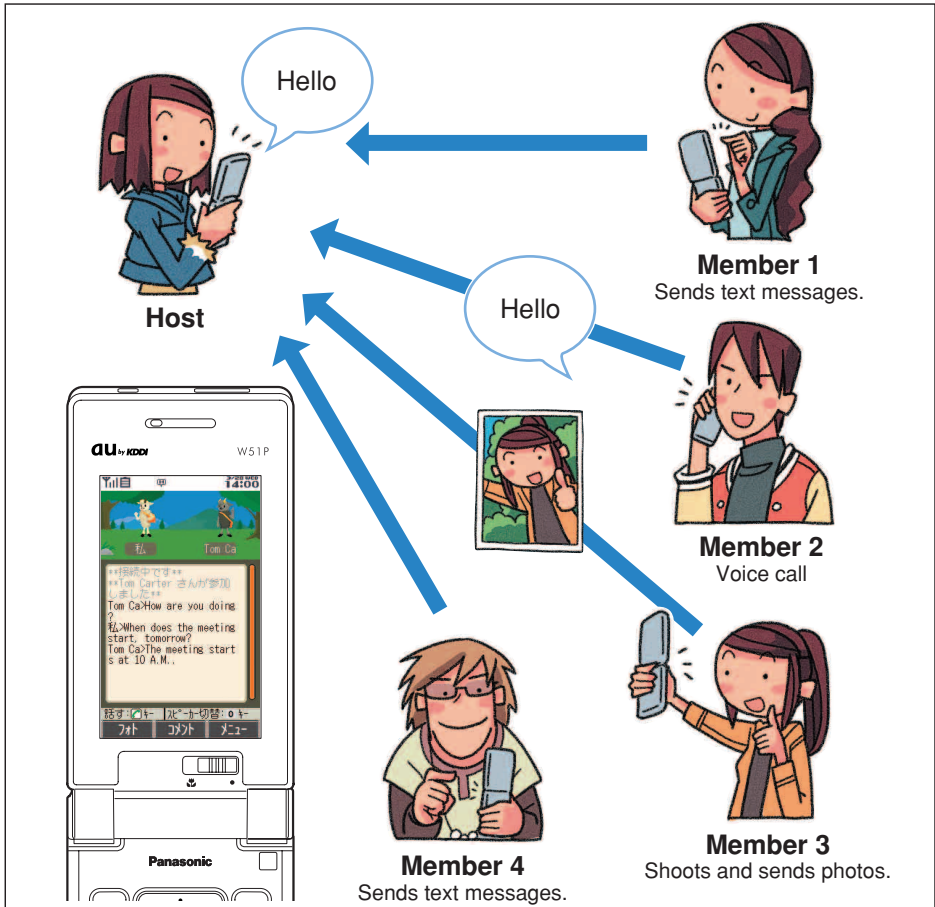




CAUTION


- ◎ Due to the conditions like frequent use, location, or signal conditions, the time you can use for meeting may become shorter than usual.
- ◎ Two to five people can use this service at the same time.

Displays the Hello Messenger Menu

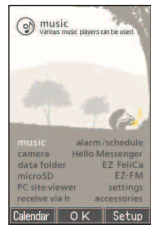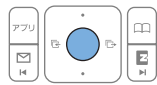1 While the standby screen is displayed, press .



2 Use  to select “Hello Messenger,” and press  (OK).

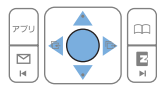

When you start Hello Messenger for the first time, press  (OK) and select your own cartoon-style character, then press  (設定) (Setting).

Item	Outline
スタート (Start)	To select the members to invite to the meeting
コメントログ (Comment logs)	To display Comment logs (meeting records)
ヒント (Hint)	To display basic operations
オプション (Option)	To configure various settings

Character list



You can select one of these 12 characters as your Hello Messenger Character.


 


Invite the Members to the Meeting




You can invite the members for the meeting. To start the meeting, perform steps 1 through 2 under “Displays the Hello Messenger Menu” (page 58), and continue with the following steps.


1

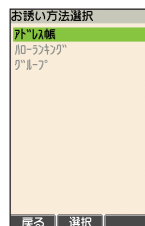Use  to select “スタート” (Start), and press  (選択) (Select).



2

 
Use  to select “アドレス帳” (Address Book), and press  (選択) (Select). Use  to select the members.



To select the members from the address book entries, perform steps 1 through 2 under “Dialing from the Address Book” (page 44).

3


Press  (Select).


“Select Phone Number” screen appears and select the phone number and press  (OK).

The member list appears.

Your name is shown on the top of the list (or “私” (Me) is shown when your name is not registered in the profile).

Your name or “私” (Me) cannot be changed nor deleted.

To add members, select the blank column, press  (選択) (Select), and repeat steps 2 through 3.


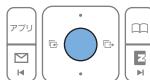


4

Press  (お誘い) (Invite).

The member registered in your list gets an invitation message.

When you see “○○さんが参加しました” (○○ has joined) appears on the display, you can start meeting with the member.

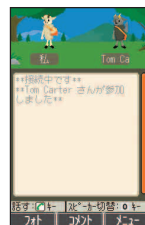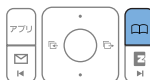

Info

- ◎ You can register the member from “ハローランキング” (Hello Ranking) or “グループ” (Group).
- ◎ You can activate Hello Messenger from address book, outgoing/incoming records, phone number input screen to start the meeting.

When You Get an Invitation Message to Join



When you get an invitation message to join, ring tones sounds or your cellphone vibrates. The invitation screen (inviting you to join the meeting) appears. When you set “着信モード” (Incoming Mode) to “自動応答モード” (Auto Response), no ring tone sounds, and you can start meeting without any operation.

When you get an invitation message to join


The message (inviting you to join the meeting) appears on the display.



1

Use  to select “参加” (Join), and press  (OK).

On the incoming screen, you can see the host's name, total number of the members, and the time of acceptance.

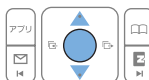

Info

- ◎ While Manner Mode is on, no ring tone sounds from speaker nor earphones.
- ◎ Even if Manner Mode is on, vibrator setting for “ハロー着信音” (The Ring Tone for Hello Messenger) has a priority to the Manner Mode.

Camera Features

Your W51P comes with a built-in 2.1-megapixel, 2.07-million effective pixel camera to shoot photos and record movies. You can attach the photos and movies that you shot/recorded to e-mail messages.


Using the Camera

Shooting a Photo (page 63) Recording a Movie (page 64)

1

Use your images for W51P functions!

You can use photos you shot for the standby screen, for the image that appears while the ring tone is sounding, and in your address book.

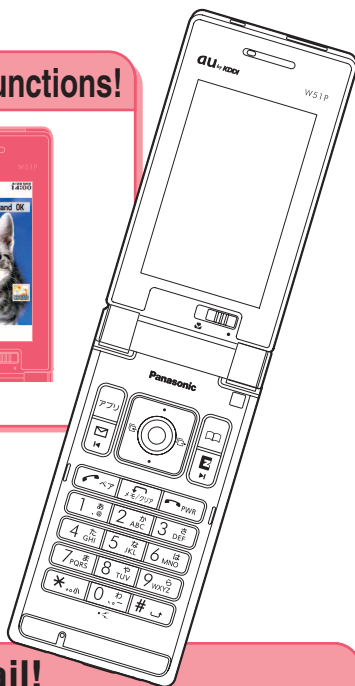

Camera

2

Send images by e-mail!

Within 500KB*, you can send a photo or a movie (shot or recorded with Mail Mode) as an e-mail attachment.


※ Certain signal conditions may cause slow work sending/receiving e-mails.




Tips for Better Photos


Shooting Phone/Wallpaper size/etc. Images


Do not cover the lens with your hands. Hold the camera securely with both hands.

Use your thumb to press  (Shutter) to release the shutter.

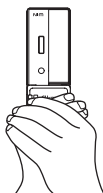

Shooting VGA/SXGA/UXGA/WIDE size Images

Do not cover the lens with your hands. Hold the camera securely with both hands. Use the index finger of your right hand to press  to release the shutter.

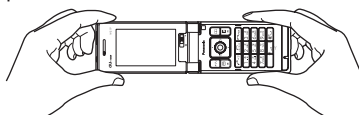

Tips for Avoiding Hand Movement


- Remain steady by keeping your arms lightly against your sides and standing with your legs spread apart to about shoulder level. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is especially important when shooting where lighting is dim.
- Self-timer is also available for shooting photos. With the self-timer, you do not need to press the shutter button to shoot a photo, so there is less chance of a blurred image caused by accidental movement of the phone.

Photo and Movie Sizes

The following shows the sizes of the photos and movies that can be recorded with your W51P.

Photo Sizes


Photo sizes		Where to save	
Phone:120×160		"Photo Folder" in W51P	①
Wallpaper:※ 240×320			②
WideWallpaper:240×400			③
VGA:640×480			④
SXGA:1280×960		"Digicam Folder" in micro SD™ Memory Card	⑤
WIDE:1600×960			⑥
UXGA:1600×1200			⑦

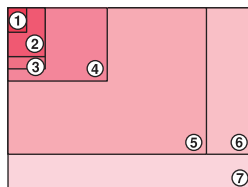

※ The image sizes of Coupling Shot, Updown Shot and Serial Shot are same as that of "Wallpaper".

Movie Sizes

Movie sizes		Where to save	
Mail Mode	Standard S:96×80	"Movie Folder" in W51P	①
	Standard M, High Quality M:128×96		②
	High Quality L:176×144		③
Video Mode	QVGA:320×240	"Movie Folder" in micro SD™ Memory Card	④

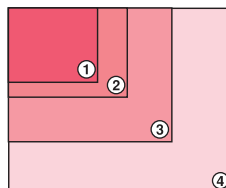




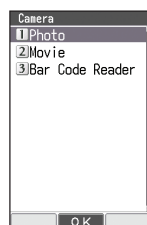
 
※ When no microSD™ memory card is inserted, the files are saved to the Data Folder of W51P irrespective of its size.

Camera


Shooting a Photo




 
- While the standby screen is displayed, press , use  to select “camera,” and press  (OK).



- Press  (Photo).

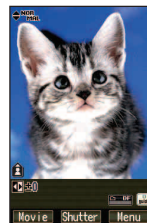

- Point the lens at the subject, and press  (Shutter).

 


The phone emits a shutter sound.

Note that the phone emits the shutter sound even if Manner Mode is on.

You can also press  in place of .

- Press  (Save).





The display shows the message “Saved to data folder (Phone).,” and returns to the photo monitor screen. Photos you shot are saved to the “Photo Folder,” which is in the Data Folder.

Recording a Movie




- 1 While the standby screen is displayed, press . Use to select “camera,” and press (OK).

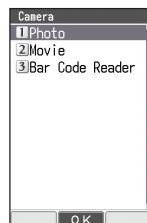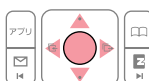

- 2 Press (Movie), point the lens at the subject, and press (Rec).

The phone emits a shutter sound to signal the start of recording.
Note that the phone emits the shutter sound to signal the start of recording even if Manner Mode is on.


You can also press in place of .

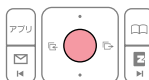

- 3 To stop recording, press (End).

Even if you do not press (End), recording will stop automatically after about 15 seconds.


The phone emits a shutter sound when recording stops.

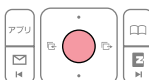

- 4 Press (Save).

The display shows the message “Saved to data folder (Phone).,” and returns to the movie monitor screen.

Movies you recorded are saved to the “Movie Folder,” which is in the Data Folder.

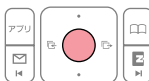

■ Meanings of the Photo Titles

The initial photo mode setting when you purchase your W51P is “Normal Shot (Wallpaper 240×320)”. The photo you have shot is saved in Data Folder.

Meanings of the Photo Titles in the “Photo Folder,” which is in the Data Folder.



Example of a Photo Title 070328_1400~0001

Date: March 28, 2007

Time: 14:00 p.m.



Serial Number

When You Fail in Shooting Good Photos

If the shot photo is not what you want, press  or  in step 4 of the procedure above.

Next, repeat step 3 to reshoot.

Displaying Key Help

While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.

Press  again to exit key help.

■ Meanings of the Movie Titles

The initial movie mode setting when you purchase your W51P is “Mail Mode (High Quality L 176×144)”. The maximum recording time in “Mail Mode” is 15 seconds. The movie you have recorded is saved in Data Folder.

Meanings of the Movie Titles in the “Movie Folder,” which is in the Data Folder.

Example of a Movie Title 070328_1400~0001



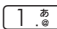
Date: March 28, 2007

Time: 14:00 p.m.

Serial Number



※ “S_” is added to the beginning of the movie title when the movie size is “Standard S.”

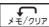When You Fail in Recording Good Movies

If the recorded movie is not what you want, press  or , and press  (Cancel) in step 4 of the procedure above.

Next, repeat step 2 to rerecord.




Displaying Key Help



While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.



Press  again to exit key help.



Viewing Photos and Movies



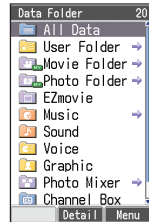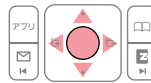

- 1 While the standby screen is displayed, press , use  to select “data folder,” and press  (OK).

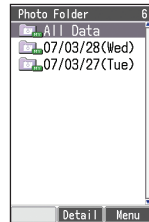
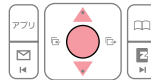


- 2 Use  to select “Photo Folder,” or “Movie Folder,” and press  (Detail).






Selecting “All Data” displays a list of all photos and movies in the “Photo Folder” or “Movie Folder.”

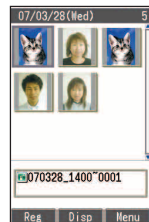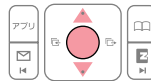- 3 Use  to select the dated (by recording date) folder, and press  (Detail).



A list of all photos/movies that were saved that day are displayed.

- 4 Use  to select the photo or movie you want to display/play, and press  (Disp/Play).

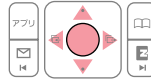

The photo or movie displays/plays.

※ To pause movie playback, press  (II).

Playback will stop automatically when the movie ends.

Attaching a Photo or Movie to an E-mail Message

Perform the procedure from step 1 to 3 under “Shooting a Photo” (page 63) or “Recording a Movie” (page 64), and perform the following steps.

1

Press **アプリ** (E-Mail), and press **1 あ .@** (Attach).

Photos you shot are stored in the “Photo Folder” and movies are stored in the “Movie Folder,” (those folders are in the Data Folder).



2

Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages” (page 49) to create an e-mail message.


※ A movie attached to an e-mail can be played only on the cellphone that supports movie playback or on a PC.

Using EZweb

To use EZweb, EZweb subscription is required. If you did not subscribe when purchasing your phone, contact your nearest au shop or the au Customer Service Center.

In addition to EZweb subscription, an initialization procedure is needed before you can use EZweb. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 22).


EZweb allows you to access to Chaku-Uta®, the latest news, and other web-based contents.

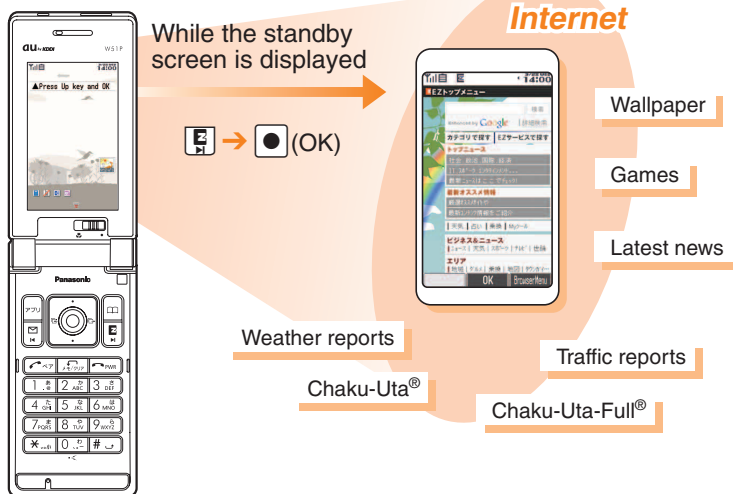

Displaying the EZ Top Menu

1

While the standby screen is displayed, press **[E]**, use **[◀▶]** to select “EZweb,” and press **[1 あ]** (Top Menu).

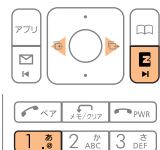

1	キーワード検索機能 (Search by keywords) Provides information search function by keywords
2	カテゴリで探す (Search by category) Searches for a site by category
3	EZサービスで探す (Search by useful EZ services) Introduces useful, amusing and recommended unique services by EZweb
4	トップニュース (Top News) Provides the automatically-updating news
5	最新オススメ情報 (au recommending Information Updates) Introduces special features or contents updated in EZweb
6	デイリーツール (Daily Tool) Provides the daily information such as weather, fortunetelling, and useful information about transfer
7	ビジネス&ニュース (Business & News) Provides the latest information such as news, weather, share prices, and other information beneficial for business
8	エリア (Area) Provides district information such as transfer or map
9	ショッピング&オークション (Shopping & Auctions) Provides information about shopping malls where you can purchase goods with your cellphone and the information about the net auction where you can sell or buy easily
10	ライフ (Daily life) Provides useful information for daily life
11	ホビー&カルチャー (Hobbies & Culture) Provides the latest information about games, fortune-telling, music, e-books, hobby and entertainment trends
12	コミュニティ (Community) Provides the useful, amusing information that make you feel like using such as SNS, blog
13	au My Page Provides the various information, useful tools, or large storage spaces, which are appropriate for your selection of the services
14	au style Introduces au-recommending information and sites
15	とくする情報 (Valuable Information) Provides gifts and useful information exclusively for EZweb service subscribers for free
16	auお客さまサポート (au Customer Support) Provides phone bills, procedures, au information, and au on-line manuals
17	カンタンアクセス・オープンサイト (Simple Access and Open Site) Introduces Simple Access and Open Site
18	災害用伝言板 (Disaster Message Board) To register/to check the safety information in disasters
19	ENGLISH Introduces English sites




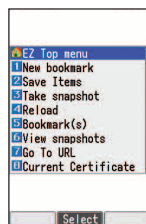
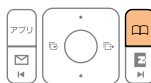
CAUTION

- ◎ The layout and contents of the EZweb screens are example. These are subject to change.
- ◎ Some sites may charge you for the content in addition to call charges.

Bookmarking Sites You Frequently Access



- 1 Display favorite sites you want to bookmark, and press  (BrowserMenu).



- 2 Press  (New bookmark).

※ You may not be able to bookmark some sites.




- 3 Press  (Reg.).



- 4 Use  to select a folder, and press  (OK).

The message "Registered." appears when completed.

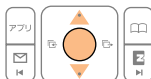



Info

You can have up to 100 sites bookmarked in the Favorite Sites.


Viewing a Bookmarked Site




- 1 While the standby screen is displayed, press .

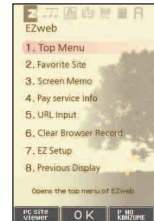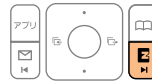

- 2 Use to select “EZweb,” and press (Favorite Site).

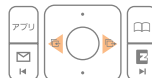

- 3 Use to select a site or folder, and press (OK).

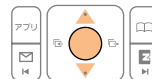




If you selected a folder, use to select a site, and press (OK).



Downloading Chaku-Uta®


To download a Chaku-Uta®, perform step 1 under “Displaying the EZ Top Menu” (page 69), and perform the following steps.

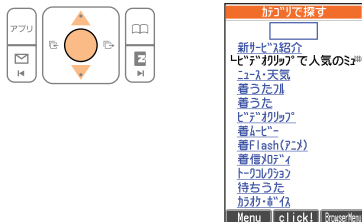

- 1 Use  to select “カテゴリで探す” (Search by Category), and press  (OK).



- 2 Use  to select “着うた” (Chaku-Uta®), and press  (Select).

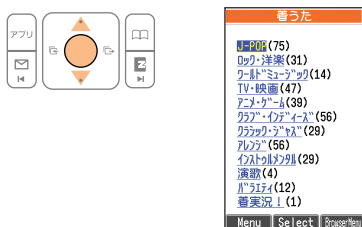

- 3 Select the content (desired information site), and download it.

In order to use fee-based contents, you need to enter your EZ password or premium EZ password.

Default is the 4-digit number you entered on your subscription contract.

Input the required password according to the instructions that appear on the display. The first time you use a site, register the password you want to use.

To download information, follow the instructions that appear on the display.

Downloaded data is stored in the Data Folder.

CAUTION



In addition to call charges, you will be charged according to the pricing policy of each site to download Chaku-Uta® and other contents from a fee-based site.


Info


Perform the same procedure to download wallpaper and use it for the standby screen background.

Downloading Chaku-Uta-Full®



- 1 While the standby screen is displayed, press , use  to select “au Music.”

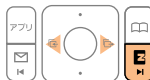

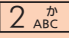- 2 Press  (Jump to EZ Music!.)

This operation connects the phone to “EZ Music!.” For the operations after connecting, follow the instructions displayed on the screen.

In order to use fee-based contents, you need to enter your EZ password or premium EZ password.

Default is the 4-digit number you entered on your subscription contract.



Info

 
You can also download Chaku-Uta-Full® by selecting “着うたフル” (Chaku-Uta-Full®) in step 2 under “Downloading Chaku-Uta®” (page 72).


Checking Charges


You can check call and transmission charges.




1 While the standby screen is displayed, press



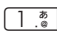When the EZweb connection confirmation screen appears, press
 (Yes).

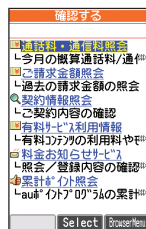

2 Use to select the item you want to check, and press (Select).

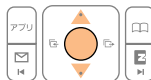


EZ Channel-Plus/EZ Channel

EZweb subscription required

EZ Channel-Plus/EZ Channel provides the latest programs you registered to download. Each updated content is automatically downloaded to your W51P.

■ Displaying EZ Channel-Plus/EZ Channel Menu

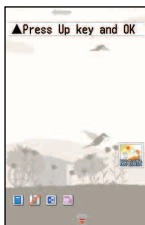

Standby screen

Press [F].



EZweb menu

Use [F] to select
“EZ Channel-plus.”



EZ Channel-Plus menu

■ Enjoying EZ Channel-Plus/EZ Channel

① Register the programs you are interested in.

You can register up to 16 programs (up to 3 of EZ Channel programs) from “Jump to Program Guide.”

Registered programs are downloaded automatically since late at night to early morning, and saved in “My Channel.”

※ The numbers of programs you can save may vary according to Data Folder memory status.



© KDDI

② Playback the program.

You can watch the program saved in “My Channel” whenever you want.




© KDDI

③ Save the program.

When a registered program is updated, the program is overwritten with new one.

The programs you do not want to delete should be saved in “Multi Folder” etc.

※ In some cases, you may not be able to save a program because of copyright protection.

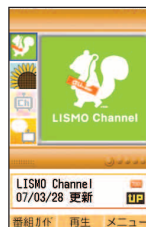

Info


- You need to subscribe to Packet Transmission Flat Rate Service to register a program.
- An initialization procedure is needed before you can use EZ Channel-Plus. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 22).
- With EZ Channel service, you may get a large data by each program (maximum of approximately 5MB). You are recommended to subscribe to Packet Transmission Flat Rate Service using this service.
- When the scheduled delivery time comes, the programs are automatically downloaded. Turn on the cellphone with its battery pack full, and put it in the area with good reception.
- The display layout and contents are examples. These are subject to change.

EZ Navi Features

EZweb subscription required


EZ Navi uses global positioning system (GPS) information to provide you with useful information.

You can use various sites such as “EZ Navi Walk” that navigates you to your destination, “Position Search” that allows you to check where your child is, and “Area Message” that lets you know when your child is coming close to the destination.

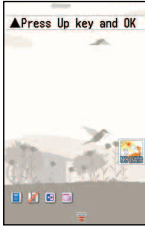


Standby screen

Press .

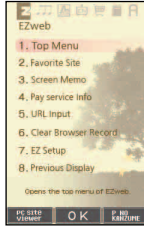

EZweb menu

Use to select “EZnavi.”

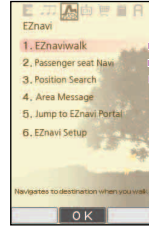

EZ Navi menu

Checking your route: “EZ助手席ナビ” (Passenger seat Navi)




This service provides route information (by voice and map) to a person in passenger's seat.

When you check where your child is: “安心ナビ位置確認” (Position Search)




This is a service that you can check the location of an au cellphone supporting “Position Search” by operating W51P. There are two kinds of services: “いつでも位置確認” (Auto Position Search) (paid) and “位置確認メール” (Position Search Mail) (free).

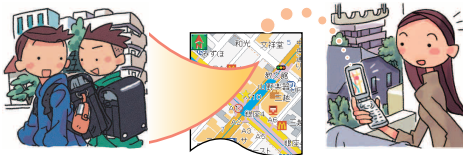

Receiving an e-mail alert whenever another phone enters or exits a particular area during a specific time of day: “安心ナビエリア通知” (Area Message)

Alert mail is sent to a particular au phone whenever another phone enters (or is inside of) a preset area.

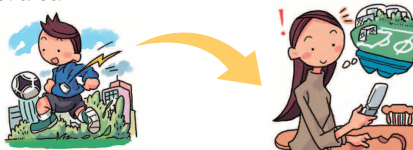

“EZnaviwalk”

A menu of useful options you can use while you are out.




ナビをする* (Navigation)	Searchable source of a route guidance (voice navigation) to your destination, shops, and facilities
地図を見る (View Map)(free)*	You can view a map of your current location or any other location.
乗換検索する (Search Connection)(free)*	Searchable source of train transfer and timetable information
道路情報を見る (View Traffic Info)	Check real-time traffic information on the major roads all over Japan.
もっとナビウォーク (EZ Navi Walk)	Provides explanations about each setting or search on PC.
インフォメーション (Information)	You can register for memberships or make inquiries.

The star symbol shows that you can use your voice to enter search terms. This is called “Voice input” function.


※ You are charged a fee for some services.

“Transfer search”

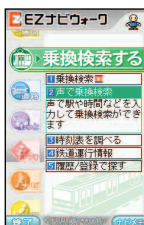

Only to enter the station names at which you get on and off the train, you can find the information such as the rail line names, the station name where you change trains, a time table, and the time required. You can find a timetable of the starting train and the last train.

“3D Navi”

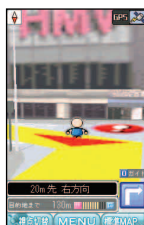

The display is switched to the 3D image at the guidance point or a point near the destination.

Navigation engine by NAVITIME JAPAN
地図:昭文社／住友電工
3Dデータ:ゼンリン／ジオ技術研究所
Z06A-第2137号

“View My Position”



Simply select View My Position to display your current location on a map in real time.

Your initial location is indicated by ★. Changes in your location are indicated in real time by 🚗.

“Mail My Position”



You can e-mail a map of your current location to other cellphones.

Info

- In addition to packet transmission fee, you may be charged some other fees for using EZ Navi.
- The display layout and contents are examples. These are subject to change.
- 3D Navi look straight ahead wherever you turn to.
- Because 3D Navi displays a map, packet transmission fee is large.
- You can use 3D Navi in the area along the street within a radius of 50 meter from a main crossing in 23-ward area and some major cities designated by government.

Security Navi Features

EZweb subscription required

Position Search Features

When your child does not come home early and you are worried if your child may be lost, you can check the current location of your child by a map with a simple operation. There are two kinds of services of “Position Search”: “Auto Position Search” and “Position Search Mail”.

1

“いつでも位置確認” (Auto Position Search)



Example: When the mother sent a mail to her child:


Features

- You must register each other's information in both cellphones beforehand. When mother searches for child's position, W51P automatically shows the child's current position without operations from the child.

Notice: The monthly fee is charged separately.

2

“位置確認メール” (Position Search Mail)

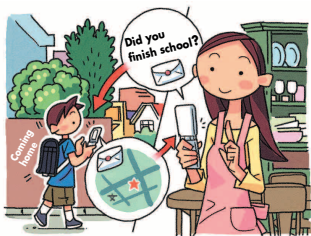

Example: When the mother sent a mail to her child:

Features

- By sending e-mail from mother to child, she can confirm the child's position. When child's number is saved in Address Book, mother can confirm the child's position easily without membership registration.

Notice: When confirming, this service requires child's operations.

Area Message Features

This service lets you configure two au phones with specific areas and specific times. Whenever a child carrying one of the phones approaches (or is inside of) the specified area during the specified time period, an e-mail alert is sent to the other phone. Area Message can also be configured so an e-mail alert is sent when the child leaves (or is outside of) a specified area.

“エリア通知” (Area Message)



Example: When the mother checks the area her child is in:

Features

- When your child goes to Juku (cram school) or culture lesson and you are worried about your child's way home, the child's cellphone automatically informs the mother's that the child has passed the usual route.

Info

- Security Navi services are available only among the cellphones supporting these feature.
- Before you can use Security Navi, each other's cellphone number must be recorded in the address books of both of the cellphone.
- Before you can use Security Navi, you need to agree the terms of use that appears the first time you start it up and you must register a password. Agreement of the terms of use is required for both sides.
- The wrong location may be displayed in areas where GPS reception is poor, underground, inside of a building, or in areas surrounded by buildings.
- Area Message may not be able to send alerts properly in cases where correct location information cannot be obtained.
- When the other party is out of range, set to “reject,” no application, operating, or using a cellphone not supporting this service, you cannot check the location.
- This service becomes unavailable, when “The Use Suspension Course of Price Safety Service” is activated and the charges reach the upper limit.
- The screen is an example, and may differ from the actual display.
- Security Navi features cannot be used while C-mail is disabled or when EZ apps Restrict is selected.
- Free calling time provided by your service plans can be applied to EZ apps transmission charges. However, Family C-mail Service or Packet Transmission Discount Service does not apply to EZ apps transmission charges.
- In addition to the Packet transmission fee, information fee is charged for obtaining information or displaying map separately.

EZ FeliCa is a service available for the cellphones loading the technology of contact-free IC cards called FeliCa. Simply by holding W51P over reader/writer (external device)*, you can use W51P for shopping by using e-money or use it as member's cards, point cards, and so on.

When you use EZ FeliCa, you need to download the applications from the provider of the service you want to use.

“QUICPay” (クイックペイ) is prepared at the time of purchasing.

→ “Using FeliCa-supported EZ apps” (page 83).

* Devices on the electronic cash registers at stores, etc, that exchange data between FeliCa chips

EZ FeliCa Features

Member's Card

Available as member's cards or point cards.

Shopping

You can shop using the e-money or credit card functions of your cellphone.

Transportation Ticket

With your W51P, you only need your cellphone for the use of public transportation.

au network

You can check the history of use or the balance on the display of the cellphone.


You can make online charge or perform various procedures anytime, anywhere.

Notes on Using EZ FeliCa

- Keep your W51P safe. In case your cellphone is lost, please contact the service company for details about EZ FeliCa-supported service.
- We recommend that you set FeliCa Lock or Remote Auto Lock in case of loss or theft.
- We accept no responsibility for loss or damage of your data caused by theft, loss or malfunction of your W51P.
- Your security codes and passwords needs to be highly confidential and protected.
- Contact the service company for further details about FeliCa-supported EZ apps.
- Even when your W51P supports EZ FeliCa service itself, some services may be unavailable. For details, contact your nearest au shop or the au Customer Service Center.
- Some of the EZ FeliCa service are subscription dependant.
- For details about each service, contact the EZ FeliCa service provider.
- Contents provided by each service are subject to change without notice.
- Cellphones supporting each service are subject to change without notice.


Communicating with Reader/Writer

You can use EZ FeliCa simply by holding the FeliCa mark over reader/writer.

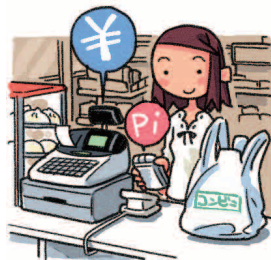

1


Hold the FeliCa mark of W51P over reader/writer.

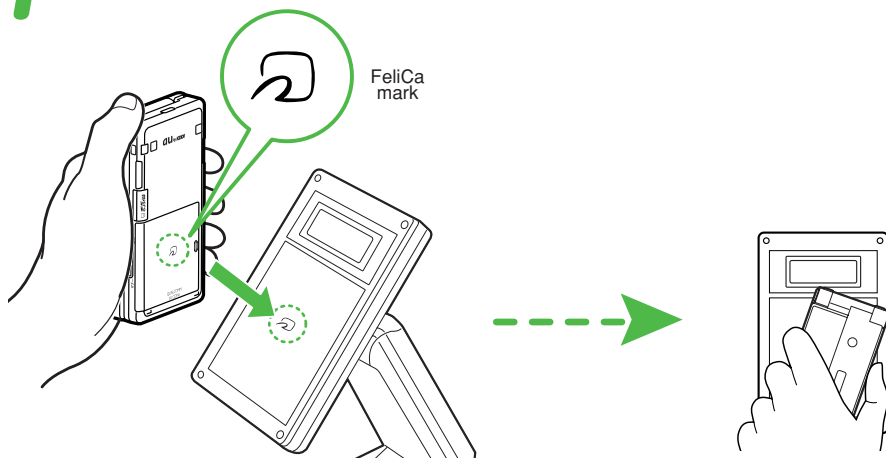




Info

- ◎ You can use EZ FeliCa without starting FeliCa-supported EZ apps.
- ◎ EZ FeliCa is available even when the power is turned off. However, while FeliCa Lock is active, or the battery level is very low, you may not be able to use EZ FeliCa.
- ◎ When you use EZ FeliCa, do not remove the battery pack cover. If you remove the battery pack cover, you may not be able to use EZ FeliCa properly.
- ◎ Be careful not to bump the FeliCa mark against reader/writer when holding over.

Setting FeliCa Lock


You can restrict the use of EZ FeliCa by setting FeliCa Lock on. You can temporarily release the FeliCa Lock and use EZ FeliCa for a certain period of time by holding down  for about one second while the standby screen is displayed and entering the lock No. (quick release).

 1 While the standby screen is displayed, press

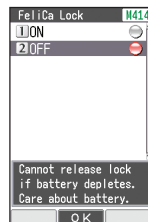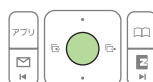

2 Press (ON), enter the lock No., and press .


The FeliCa Lock is set.

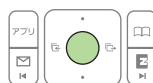


CAUTION

If the battery discharges while the FeliCa Lock is on, you will be unable to release the FeliCa Lock. Be careful of the battery level. When your battery is discharged, recharge the battery and release the FeliCa Lock to use EZ FeliCa.

Info

- When FeliCa Lock is set,  appears on the standby screen.
- In case you lost W51P, you can set the FeliCa Lock by setting Remote Auto Lock. Remote Auto Lock requires the initial setup beforehand.
- Even if you set Auto Lock, the FeliCa Lock will not be set.

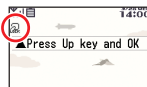


Releasing FeliCa Lock temporarily (quick release)

When the FeliCa Lock is on, hold down  for about one second while the standby screen is displayed, enter the lock No., and press .

The vibrator works, "FeliCa Lock Quick releasing" is displayed and the FeliCa Lock is temporarily released.

Info


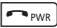
- If you press  or when "Quick Release" (about 5 minutes is set at the time of purchasing) elapses, W51P returns to FeliCa Lock status.
- You cannot start FeliCa-supported EZ apps while FeliCa Lock is temporarily released.



Using FeliCa-supported EZ apps

“QUICPay” (クイックペイ) is prepared as FeliCa-supported EZ apps in W51P at the time of purchase.



■ Starting FeliCa-supported EZ apps

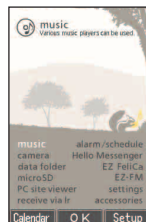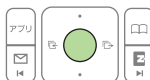- 1** While the standby screen is displayed, press .




- 2** Use  to select “EZ FeliCa,” and press  (OK).

EZ FeliCa menu appears.

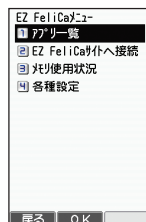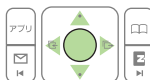

EZ FeliCa menu

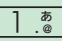- 3** Press  (アプリ一覧) (EZ apps List).

The list of the FeliCa-supported EZ apps saved in W51P is displayed.
Select the EZ app you want to start.




The W51P allows you to listen to the FM radio.

Before using an antenna

Matsushita round-type earphone jack conversion adaptor 01 and MDR-E0931SP/BC by SONY have a built-in antenna to get a signal.

When you listen to the EZ•FM, connect Matsushita round-type earphone jack conversion adaptor 01 and MDR-E0931SP/BC by SONY to get a signal.

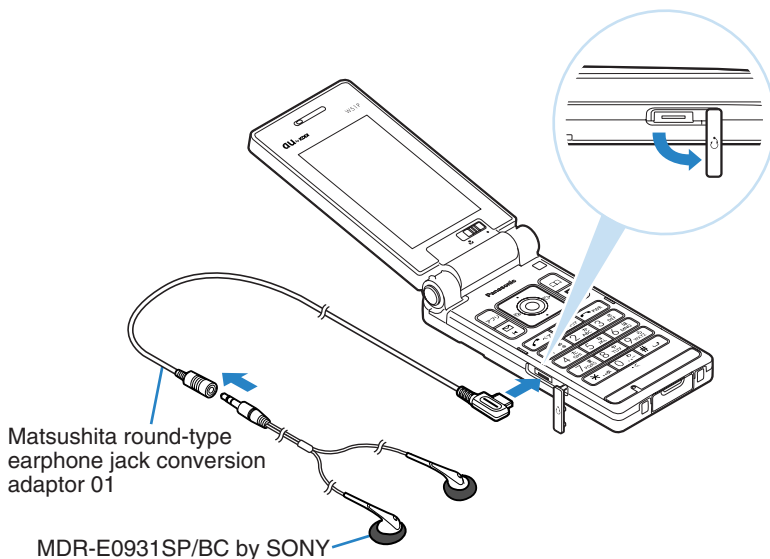




Info

When you use Matsushita round-type earphone jack conversion adaptor 01, pull out the connector straight to the flat-type earphone-microphone jack.


 
Listening to the EZ-FM






1

While the standby screen is displayed, press , use  to select “EZ-FM,” and press  (OK).

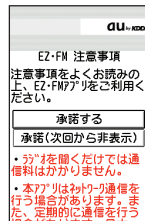The precautions appear.




 
2

Use  to check the precautions, and use  to select “承諾する” (Accept), and press .

The EZ-FM screen appears.

When you use EZ-FM for the first time, area selection screen appears.

Select an area where you use the EZ-FM.

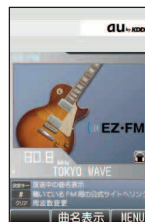

EZ-FM screen

Info

- When you use EZ-FM for the first time, perform the EZweb initialization procedure.
If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 22).
- No packet transmission fees are charged for listening EZ-FM. However, you will be charged for using display the song title service provided by EZ-FM apps.
- The display layout and contents are examples. These are subject to change.
- When you listen to the EZ-FM indoors, the antenna is easier to catch a radio wave by the window.

■ Viewing and Operating the EZ-FM screen



Icons appear if downloadable information is provided

Radio frequency

Displaying changeover speaker/earphone

Radio station/Song title

Banner

EZ-FM screen

Main Operations:


Key	Operation
	Switches radio stations. ※Press to to switch to a radio station which is set to each key.
	Tunes in on the station by 0.1 MHz. ※Press for more than one second and tuning starts automatically. Press to to input the radio frequency directly.
	Increases the volume.
	Decreases the volume.
	Stops EZ-FM. ※Use to select "Stop," and press (OK).

Listening to the EZ-FM as BGM/ Stopping the EZ-FM

Suspends/stops the EZ-FM apps. Even after suspending the EZ-FM apps, you can listen to the EZ-FM as BGM.

1

Press on the EZ-FM screen.

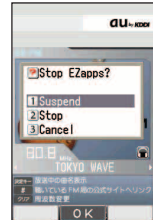

2

Press (Suspend) or (Stop).

Suspend : Suspends the EZ-FM apps.
However, you can continue listening to the EZ-FM.

Stop : Stops the EZ-FM.



Info

EZ-FM apps automatically stops after 2 hours at the time of purchasing. You can change the setting of “ラジオ自動終了” (Stopping Radio Automatically) in “ラジオ機能設定” (Radio Function/Setup).

PC Site Viewer Features

EZweb subscription required

To use the PC site viewer, an EZ WIN course subscription is required. If you did not subscribe when purchasing your cellphone, contact your nearest au shop or the au Customer Service Center. Using the PC site viewer, you can comfortably view WEB sites just like those you usually view with your PC, by high speed packet transmission of 2.4 Mbps receiving at maximum.

1

You can view WEB sites for PC with W51P

A WEB site for PC



Viewing a site with PC site viewer



Info

The content displayed is an example, and it may differ from those actually appear on the display of your phone.


If you set the “表示モード” (Display Mode) to “スモールスクリーン” (Small Screen), a WEB site is displayed adjusted to the size of W51P screen, and you can view the site with simple operations.

If you set the “表示モード” (Display Mode) to “PCスクリーン” (PC Screen), the portion of the page laid out by PC screen is displayed, and you can view the site with operations.

2

You can display/automatically-update a portion of WEB site information. “Using Standby Assignment” (page 89)

Registering to “待受指定” (Standby Assignment)

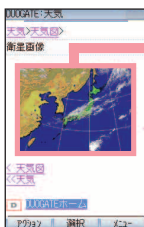

Displaying as “Standby screen”



Select a portion of a WEB site page beforehand, and register it to “待受指定” (Standby Assignment).


Display a portion of a WEB site page, and you can automatically-update it at specified intervals.


Info




If you press (接続) (Connect) while “待受指定” (Standby Assignment) is displayed, you can display from the top of the page with a full-screen and operate the PC site viewer in the same way as the usual browsing.



PC Site Viewer

Mastering Basic Operations

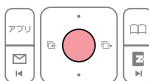

- 1** While the standby screen is displayed, press .




- 2** Use  to select “PC site viewer,” press , and press .

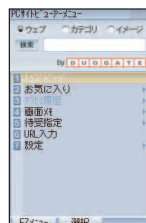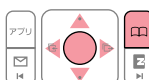

Warning message on packet transmission appears.

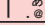
- 3** Press   (トップページ) (Top Page).

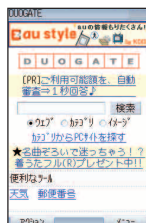

The initial setting is “Duogate” (<http://duogate.jp/>).

※ The contents displayed on the right is an example, and it may differ from the contents that actually appear on the display of your phone.

- 4** Press .

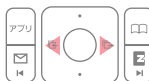


The display scrolls.

Use  to select the links on the screen.

If you select a link and press  (選択) (Select), the linked page appears.

Info

In step 2 of the procedure above, search tool appears. You can enter keywords in search window, and select “検索” (Search) to find the desired page.

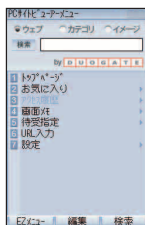

Using Standby Assignment

You can set a portion of a WEB site as the standby screen. You can set it to be automatically-updated at specified intervals.

When a specified time elapses on the standby screen, the WEB site selected by “待受指定” (Standby Assignment) is displayed.


To use “待受指定” (Standby Assignment), perform steps 1 through 4 under “Mastering Basic Operations” (page 88), and perform the following steps.



- 1 Display your favorite page, and press (メニュー) (Menu).



- 2 Press (待受指定) (Standby Assignment).

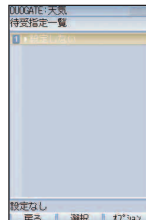

- 3 Press (オプション) (Option), and press (新規作成) (Create New).






- 4 Press (OK) twice.

If you press , you can shrink the area displayed by “待受指定” (Standby Assignment).

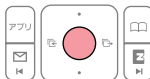

If you press (拡大) (Widen) and press , you can enlarge the display area.


※ If you press (縮小) (Narrow) again, you can shrink the display area.




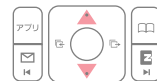
5 Press  (編集) (Edit), enter the title, and press .




6 Press  (登録) (Register), and press  (設定) (Setting).

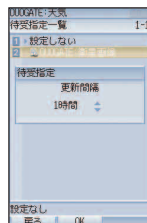

7 Use  to select the interval to update the standby screen.



If you select the interval to automatically-update the page displayed as the standby screen from among “24時間/12時間/8時間/4時間/2時間/1時間/30分/更新しない” (24 hours/12 hours/8 hours/4 hours/2 hours/1 hour/30 minutes/no update), and press , then “待受指定警告表示” (Standby Assignment Warning Display) appears.

Press , and press  to complete the setting.

CAUTION

◎Precautions for using packet transmission for PC site viewer
We recommend that you subscribe to Packet Transmission Discount Service as the Transmission fee may be quite high by performing a large-size communication such as viewing homepages that include large images.


Also, be careful that packet transmission fee will be charged for each updating if you set automatic-update by “待受指定” (Standby Assignment).

◎Checking your packet transmission fee

You can use Charge Reference Service (This service estimates this month's packet transmission fee with discount. It shows the rough number that was billed 1 or 2 days ago.).

PC ⇒ [http://my.kddi.com/\(MyKDDI\)](http://my.kddi.com/(MyKDDI))

※ Subscription is required before you can start using this service.




au phone ⇒  → “Top Menu” → “auお客さまサポート” (au Customer Support)


 
Simple Mode




Simple Mode lets you limit operations to the telephone function, address book, camera, e-mail, C-mail, EZweb, and other frequently used functions.





Entering Simple Mode

- While the standby screen is displayed, press , use  to select "settings," and press  (OK).

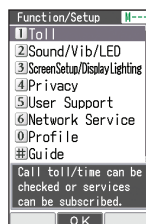

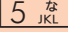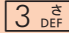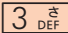- Press  (User Support),  (OperationSupport), and  (Mode Setup).

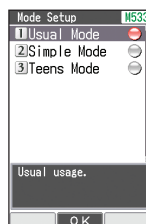

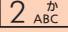
- Press  (Simple Mode).


 




Info



- The lock No. is required when changing from Teens Mode to Simple Mode.
- When you enter Simple Mode, settings configured in Usual Mode are automatically changed to those configured in Simple Mode.

Exiting Simple Mode

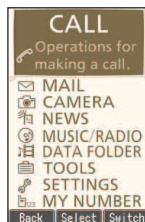
- 1 While the standby screen is displayed, press .



 - 2 Use  to select "SETTINGS," and press  (Select).

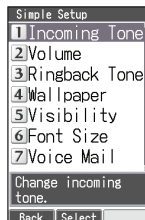

- 3 Press  (SimpleModeOFF).

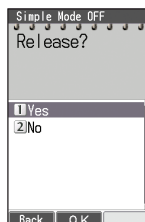


- 4 Press  (Yes).

This returns to Usual Mode.


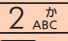



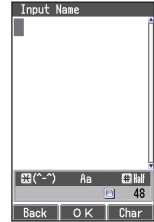
Using the Simple Mode Main Menu

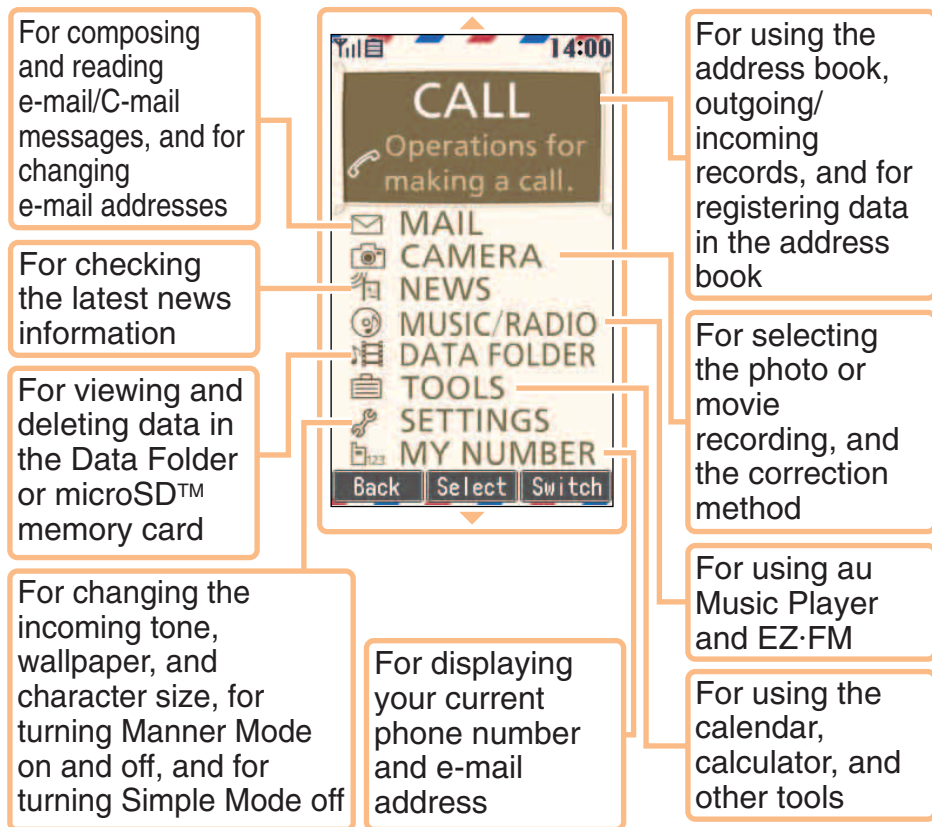


Adding Data to the Address Book in Simple Mode




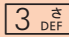
- While the standby screen is displayed, press , press  (Register), and press  (Fix).




- Enter the name, and press  (OK).


To input text
→ "Inputting Characters" (page 36)




- Check the reading of the name you inputted, press  (OK), and press  (Input by Myself).

You can also select data in incoming records or outgoing records.
To go without saving the telephone number, press  (Not Input) and perform step 5.



- Enter the phone number, and press  (OK).

When entering the number of a standard phone, be sure to start with the area code.

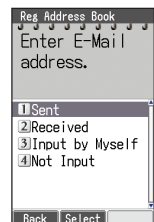

5 Press **3** (Input by Myself).


You can also select data in sending records or receiving records.

To go without saving e-mail address, press **4** (Not Input) and perform step 7.




6 Enter the e-mail address, and press **OK**.

To input an e-mail address
→ “Inputting an E-mail Address”
(page 37)

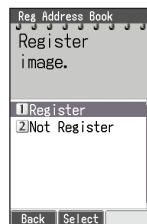


7 Press **2** (Not Register).

The confirmation screen appears.
Press **OK** (OK).

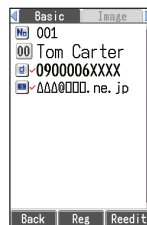

8 Press **OK** (Reg).

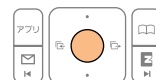

Info


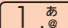
- In Simple Mode, you can only input “Name,” “Reading,” “Phone Number1,” “E-Mail Add1,” and “Image” data into an address book record.
- You can press **1** (Register) in step 7 to select a photo in the Data Folder and assign it to the address book record.
- Pressing **Reedit** (Reedit) in step 8, and pressing **1** (Change) returns to step 2 from which you can edit the contents of the record.


Using the Address Book in Simple Mode



By using the address book, you can make phone calls and send e-mail messages. You can also start Hello messenger, edit/delete records in the address book, send it via Infrared communication.






Example: To view a record in the address book

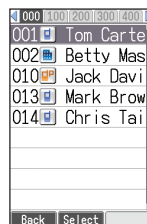
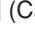

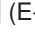
- While the standby screen is displayed, press , and press  (Look).




- Use  to select the address book record you want to view, and press  (Select).

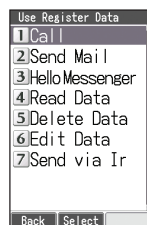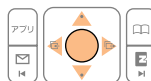


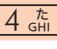
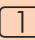
- Press  (Read Data).


The address book record appears. Use  to select the phone number, and press  (Call). You can make a phone call or start Hello Messenger. Use  to select the e-mail address, and press  (E-Mail). You can create an e-mail message.

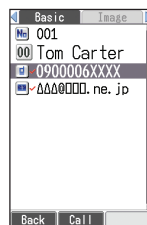


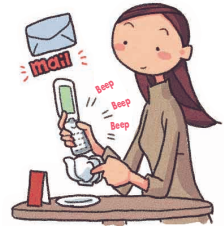

Creating and Sending E-mail Messages in Simple Mode

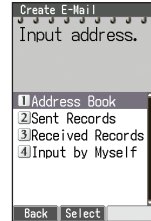




- While the standby screen is displayed, press , (E-Mail), and  (Create Mail).

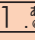


- Press  (Address Book), use  to select an addressee, and press  (Select) twice.

You can select an addresses from sending/receiving records, or you can manually enter an address.

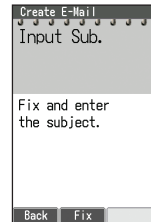


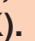- Press  (Fix), enter the subject, and press  (OK).

To input text
→ "Inputting Characters" (page 36)

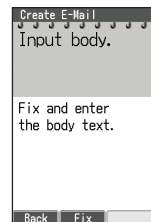


- Press  (Fix).

 

5 Enter the body text, and press (OK).

To input text
→ “Inputting Characters” (page 36)

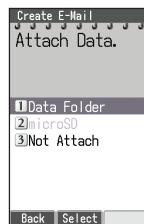


6 Press (Not Attach).

The confirmation screen appears.

Press  (OK).


 (Data Folder):

You can select a photo saved in the Data Folder and attach it to the e-mail message.

 (microSD):


You can select a photo saved in the microSD™ memory card and attach it to the e-mail message.

In Simple Mode, an e-mail message can have only one attachment.

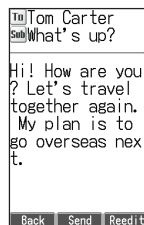


7 After checking the content of the e-mail, press (Send).

The message “E-Mail is sent.” appears on the display after the e-mail message is sent.

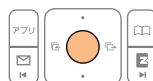




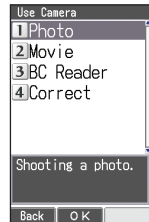
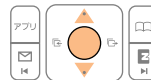
Info

Pressing  (Reedit) instead of  (Send) in step 7 returns to step 2, from which you can edit the contents of the e-mail message.

Shooting a Photo in Simple Mode



- While the standby screen is displayed, press , use  to select "CAMERA," and press  (Select).









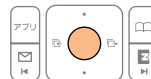
- Press  (Photo), and press  (Photo1).

Photo 1	Wallpaper 240×320
Photo 2	WideWallpaper 240×400
Photo 3	VGA 640×480



- Point the lens at the subject, and press  (Shutter).

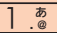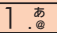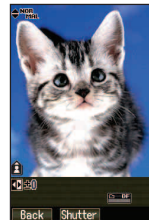
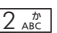
The phone will emit a shutter sound.
You can also press  in place of .



- Press  (Save).



Info

Pressing  (Menu) in step 4, and pressing  (Send Mail) will display a screen for composing an e-mail message with attached photo.



To create an e-mail message

→ Perform the procedure starting from step 2 under "Creating and Sending E-mail Messages in Simple Mode" (page 97).


Viewing Photos in Simple Mode





- While the standby screen is displayed, press , use to select “DATA FOLDER,” and press (Select).

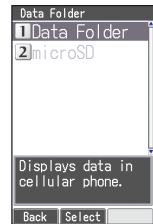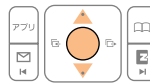

- Press (Data Folder).

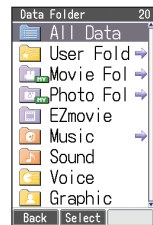


- Use to select “Photo Folder,” and press (Select).

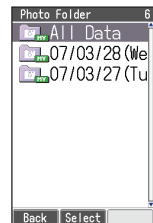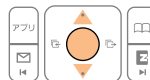





Selecting “All Data” displays a list of all photos in the Photo Folder.

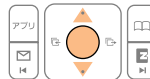- Use to select the dated (by shooting date) folder, and press (Select).




A list of all photos that were shot on that day are displayed.

5 Use  to select the photo you want to view, and press  (Menu).

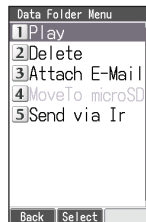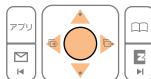

6 Press  あ (Play).

The photo appears.

 か (Delete): Deletes data.


 き (Attach E-Mail):

Displays a screen for composing an e-mail message with an attachment.

To create an e-mail message

→ Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages in Simple Mode” (page 97).

 た (MoveTo microSD): Moves the data to microSD™ memory card.

 な (Send via Ir): Sends your data via infrared.



Teens Mode

Teens Mode can be used to block spam, and to block inadvertent access to phone numbers and URLs included inside mail messages. Teens Mode can also be used to restrict call time and the number of sending mail.



Using Teens Mode

■ **Teens Mode can be used to restrict mail reception and display contents.**

When the sender is a Pair partner	Receipt is allowed.
When the sender is included in the address book	Receipt is allowed. However, the phone numbers, e-mail addresses or URLs contained in the body of the mail message can not be used.
When the sender is not either of the above	E-mail: Only the sender's name and subject are received. Body text and attached data are not received. C-mail: Not received.

■ **Turning on “Teens Restrict” and Teens Mode makes it possible to restrict call time and the number of sending mail.**




● Making Calls



To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	Call time is restricted. Further calling is not possible if the call time exceeds the “Teens Restrict” setting.

● Sending Mail Messages


To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	The number of sendings is restricted. Further mailing is not possible if the number of sendings exceeds the “Teens Restrict” setting.



Activating Teens Mode


1 While the standby screen is displayed, press , use  to select “settings,” and press  (OK).

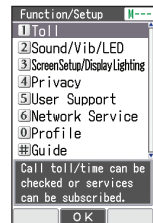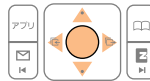



2 Press  (User Support), and  (OperationSupport).

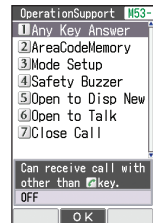

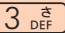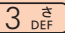3 Press  (Mode Setup), and  (Teens Mode).

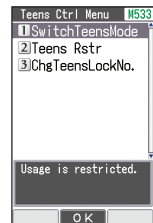

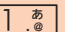4 Press  (Switch TeensMode), and enter the lock No., and press  (OK).



Info

The lock No. is required when changing from Teens Mode to Usual Mode or Simple Mode.

Other Functions

Safety Buzzer

Setting Safety Buzzer allows you to use W51P as high volume emergency buzzer by holding down for about one second while the stand-by screen is displayed.



■ To turn on Safety Buzzer

While the standby screen is displayed, press , input the lock No., and press (OK).

■ To stop Safety Buzzer

To stop Safety Buzzer, input the lock No., and press (OK).

※ You cannot turn off W51P or perform any other operation while the Safety Buzzer is sounding. The Safety Buzzer will continue to sound until you input the lock No. or the battery fully discharges.

Info

- ◎ While connected with Matsushita round-type earphone jack conversion adaptor 01 and MDR-E0931SP/BC by SONY/flat-type stereo earphone-microphone (option), Safety Buzzer sounds through W51P speaker.
- ◎ Even with Manner Mode set, Safety Buzzer Sounds.

One-push Open

You can answer the phone and show the receiving E-mail/C-mail messages by opening W51P. Refer to “Opening W51P by Using a key (One-push Open)” (page 12) about how you open W51P.


■ To set Open to Talk

Press    , and press

 (IncomingAnswer).

“IncomingCont” : Continue incoming when opening phone

“IncomingAnswer” : Answer incoming call when opening phone

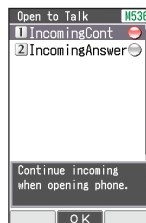

■ To set Open to Display New

Press    , and press  (ON).



Info

Even if you open W51P, a new mail message is not displayed when “Auto Lock” or “Mail Rstr” is effective.

In addition to the functions covered in this Basic Manual, your W51P also has the following features.

Global Expert

W51P supports Global Expert based on au IC-Card.

Global Expert is an international roaming service for the customers to use the phone replacing its au IC-Card with GSM cellphone for overseas use.

No special application procedure or daily/monthly fee are needed, and the call charge is added up to domestic call, so the pay procedure is simple.

au Music

You can use au Music Player to enjoy a Chaku-Uta-Full® or your favorite CD tracks. Also, you can download a Chaku-Uta-Full® or purchase CD tracks by accessing "EZ Music!"

Barcode Reader & Maker

You can use the camera to read QR codes and barcodes. Also, you can create your own barcodes directly from your address book entries.

au My Page

You can upload and backup various data in your W51P (in Address Book, E-mail, Data Folder) to au My Page on server to manage/check them.

Infrared communication

You can exchange the data saved in your address book, Schedule, or Data Folder between au cellphones supporting infrared communication.

EZ apps (BREW®)

Enjoy downloaded games and other software.

Macro Mode (Photo and Movie)

Switching closeup switch allows you to take close-up photos of food, flowers, and other subjects (closest focusing distance: 10 cm).

Serial Shot (Photo)

You can shoot up to nine consecutive images and store all of them or only selected images in memory.

Post Recording/Telop (Movie)

After recording a movie, you can add audio or text. You can select 24 colors or 169 colors for text or background.









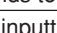

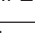





Mail Guide (E-mail)

Simply follow the steps provided for quick and easy composing of Basic Mail without attachments, Photo Mail, Paper Mail, Movie Mail, and Photo Mixer Mail.

EZ News Flash

You can check latest news report on your standby screen. With this "information delivery service," you can select EZ news flash telop or window to browse various news information.

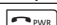Troubleshooting

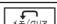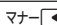Symptom	What to check	What to do	Page
The phone does not turn on. 	Is the battery pack installed correctly ?	Correctly install the battery pack.	—
	Is the battery pack charged ?	Charge the battery pack ※.	P.12
	Are you holding down  for at least 1.5 seconds ?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
I can't make calls. 	Is  (Out of Range) on the display ?	Wait until you are in a location where  is not displayed before trying to make a call.	P.14
	Are you including the area code?	When making a call to a standard phone, you need to input the area code, and the phone number.	P.26
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Did you press  ?	After inputting the phone number, press  to dial it.	P.26
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
I can't receive calls.	Is  (Out of Range) on the display?	Move to a location where  is not on the display.	P.14
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
Nothing happens when I press the keys.	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn the phone on.	P.14
The phone emits a warning tone, and turns off.	Is battery pack power low?	Charge the battery pack.	P.12
The phone answers calls automatically.	Is Easy Voice Memo turned on?	Hold down  for about one second to turn off Easy Voice Memo.	P.34
	Is Drive Mode turned on?	Hold down  for about one second to turn off Drive Mode.	P.4
I can't hear the caller.	Is the earpiece volume level too low?	During a call, press  to increase earpiece volume.	P.33
	Is the earpiece covered with your ear?	Make sure to place the earpiece to the center of your ear.	—

※ If the battery level is very low, "Now loading" is shown on the display, and after a while display disappear.

For more detailed information, visit one of the following Panasonic websites.

- On your W51P, go to <http://www.pana-site.com/ez/> (P NO KANZUME).(Japanese only)
- On your PC, go to http://panasonic.co.jp/pmc/contact/cb_0001.html.

If you lose your W51P

Turning on Remote Auto Lock makes it possible for you to set Auto Lock and FeliCa Lock on from a remote location. These lock function keeps others from using your W51P.




■ Configuring Remote Auto Lock Settings

You can set Auto Lock and FeliCa Lock on by making calls several times from the registered phone number to your W51P within the specified period of time.

1 While the standby screen is displayed, press

● 4 た GHI 1 あ .@ 3 さ DEF, input the lock No., and press ● (OK).

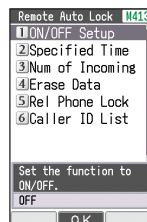



2 Press 6 は MNO (Caller ID List).



3 Use to select a registration number, press (Edit), input the phone number, and press ● (Reg).

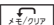


Press  twice and advance to the next step.



You can also press  (Menu) before inputting a phone number, and select the number from the address book, outgoing records, or incoming records, or you can specify a pay phone.

You can register up to three different phone numbers.

4 Press **1** **あ** (ON/OFF Setup), and press **1** **あ** (ON).

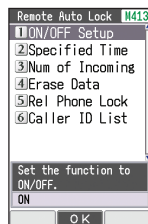



5 Press **2** **か** (Specified Time), input the period you want to specify, and press **●** (OK).

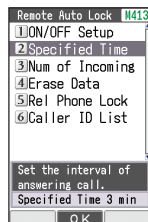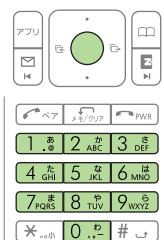

You can set the time period (the time intervals from the first call to the last call you should make to activate Remote Auto Lock).

You can set the time period between 1 to 10 minutes.

6 Press **3** **さ** (Num of Incoming), input the number of calls you want to specify, and press **●** (OK).

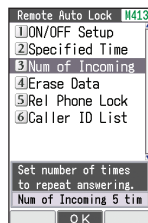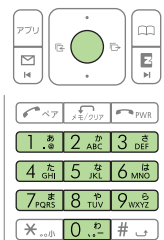

You can set how many times you should repeat making a call to activate Remote Auto Lock.

You can set it from 3 to 10 calls.

■ Setting Auto Lock and FeliCa Lock on

1 Make a call to your W51P from the registered phone number within the period of time which has been specified in “Configuring Remote Auto Lock Settings” (page 108).

After repeating a call (3 to 10 calls you have specified), Remote Auto Lock turns active, and you hear an announcement letting you know Auto Lock and FeliCa Lock has been set.

After Remote Auto Lock turns active, your W51P is automatically turned off, and turned on again.

⚠ CAUTION

- ◎ Remote Auto Lock cannot be activated while your W51P is turned off or outside of the service area.
- ◎ When you purchase the W51P, its initial value in “Erase Data” setting is “Not Erase,” and its initial value in “Rel Phone Lock” setting is “Valid.”

Index

A

Address Book	40
Adding outgoing or incoming record data to the address book	43
Dialing from the address book	44
Editing	42
Registering an address book	40
Adjusting the earpiece volume during a call	33
Adjusting the ring tone volume	32

B

Basic Operations	18
Battery level	14
Battery pack	10, 11

C

Camera	61
Recording a movie	64
Shooting a photo	63
Viewing photos and movies	66
Chaku-Uta® Downloading	72
Chaku-Uta-Full® Downloading	73
Changing the ring tone	30
Charging the battery	12
Checking charges	74
C-mail	48
C-mail Safety Block	48
Create New	55
Creating and sending C-mail messages ...	55
Reading received C-mail messages ...	56

D

Desktop holder	10, 13
Disaster Message Board Service	6
Display indicators	19
Display language	16
Domain name	24
Drive Mode	4

E

Earpiece volume	33
Easy Voice Memo Delete	35
Playback	35
Turning on	34
E-mail	47
Create New	49
Creating and sending e-mail messages ...	49

E-mail address	22, 23, 24
E-Mail Setup	54
Initial settings	22
Reading an e-mail message with attached photos or movies	52
Reading received e-mail messages ...	51
Replying to a received e-mail message ...	53
Subject	50
To	49
EZ Channel-Plus/EZ Channel	75
EZ FeliCa	80
Communicating with reader/writer	81
FeliCa mark	81
Setting FeliCa Lock	82
EZ-FM	84
Listening to the EZ-FM	85
Listening to the EZ-FM as BGM	86
Stopping the EZ-FM	86
EZ Navi	76
EZweb	68
Bookmarking sites	70
Downloading	72, 73
EZ Password	72
EZ Top Menu	69
Viewing a bookmarked site	71

G

Getting Ready	10
----------------------------	----

H

Hello Messenger	57
Invite the members to the meeting ...	59
When you get an invitation message to join	60

I

Included items	10
Incoming records	29
Initial settings E-mail and EZweb	22
Initial values	14
Inputting characters	36
Inputting an e-mail address	37
Inputting pictographs	38
Inputting useful sentences	38

K

Key functions	18
----------------------------	----

M

Mail

C-mail	48
E-mail	47

Mail filter 5, 54

Main menu 20, 93

Manner Mode

Turning on	33
Vibrator	33

Matsushita round-type earphone jack conversion adaptor 01 and MDR-E0931SP/BC by SONY 10, 84

microSD™ memory card 11, 19

Mind your manners! 1

Movie

Movie Folder	66
Recording a movie	64
Rerecording a movie	65
Sending a movie by e-mail	67
Viewing movies	66

N

Names of parts 11

Notify caller ID 26

O

One-push Open 12, 105

One-ring calls 5, 29

Other functions 104

Outgoing records 29

Own e-mail address

Changing	24
Viewing	23

P

Pair Function 45

Making a phone call, sending mail, invite a pair partner to a Hello Messenger meeting	46
Registering a Pair partner	45

PC Site Viewer 87

Mastering Basic Operations	88
Using Standby Assignment	89

Phone Call 26

Answering a call	28
Dialing a person who called you (incoming records)	29
Making a call	26
Missed call notification	28
Redialing a person you called (outgoing records)	29

Photo

Photo Folder	66
Reshooting a photo	65
Sending a photo by e-mail	67
Shooting a photo	63
Viewing photos	66

Playback

Easy Voice Memo	35
Movie	66
Photo	66

R

Redial

From incoming records	29
From outgoing records	29

Remote Auto Lock 108

S

Safety Buzzer 104

Security Code and passwords 15

Security Navi 78

Signal strength 14

Simple Mode 91

Adding data to the address book	94
Creating and sending e-mail messages	97
Entering Simple Mode	91
Exiting Simple Mode	92
Shooting a photo	99
Using the address book	96
Using the Main Menu	93
Viewing shot photos	100

Site 69, 70, 71

Soft keys 21

Spam 5, 54

Standby screen 14

T

Teens Mode 102

Troubleshooting 107

Turning Power On 14

Turning Power Off	14
-------------------------	----

U

Unsolicited advertisements 5, 54

Using Menus 21

V

Viewing your phone number 23

For inquiries, call:

au Customer Service Center (General Information)

From EZweb site:

How to access

EZ→Top Menu→au お客さまサポート

(au Customer Support)

→お問い合わせ (Inquiries)

※ Menu structure is subject to change without notice.



From regular phones:



0077-7-111

(toll free)

From au cellphones:

157 area code not required


(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.



モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and
recycle unused telephones, batteries and
battery chargers at stores bearing the 
logo regardless of brand and
manufacturer to protect the environment
and reuse valuable resources.

**Sales: KDDI Corporation
Okinawa Cellular Telephone
Company**

**Manufactured by Panasonic
Mobile Communications Co., Ltd**

January 2007, 1st Edition

Read this to access to the
au online manual

